
1970 AMC AMBASSADOR

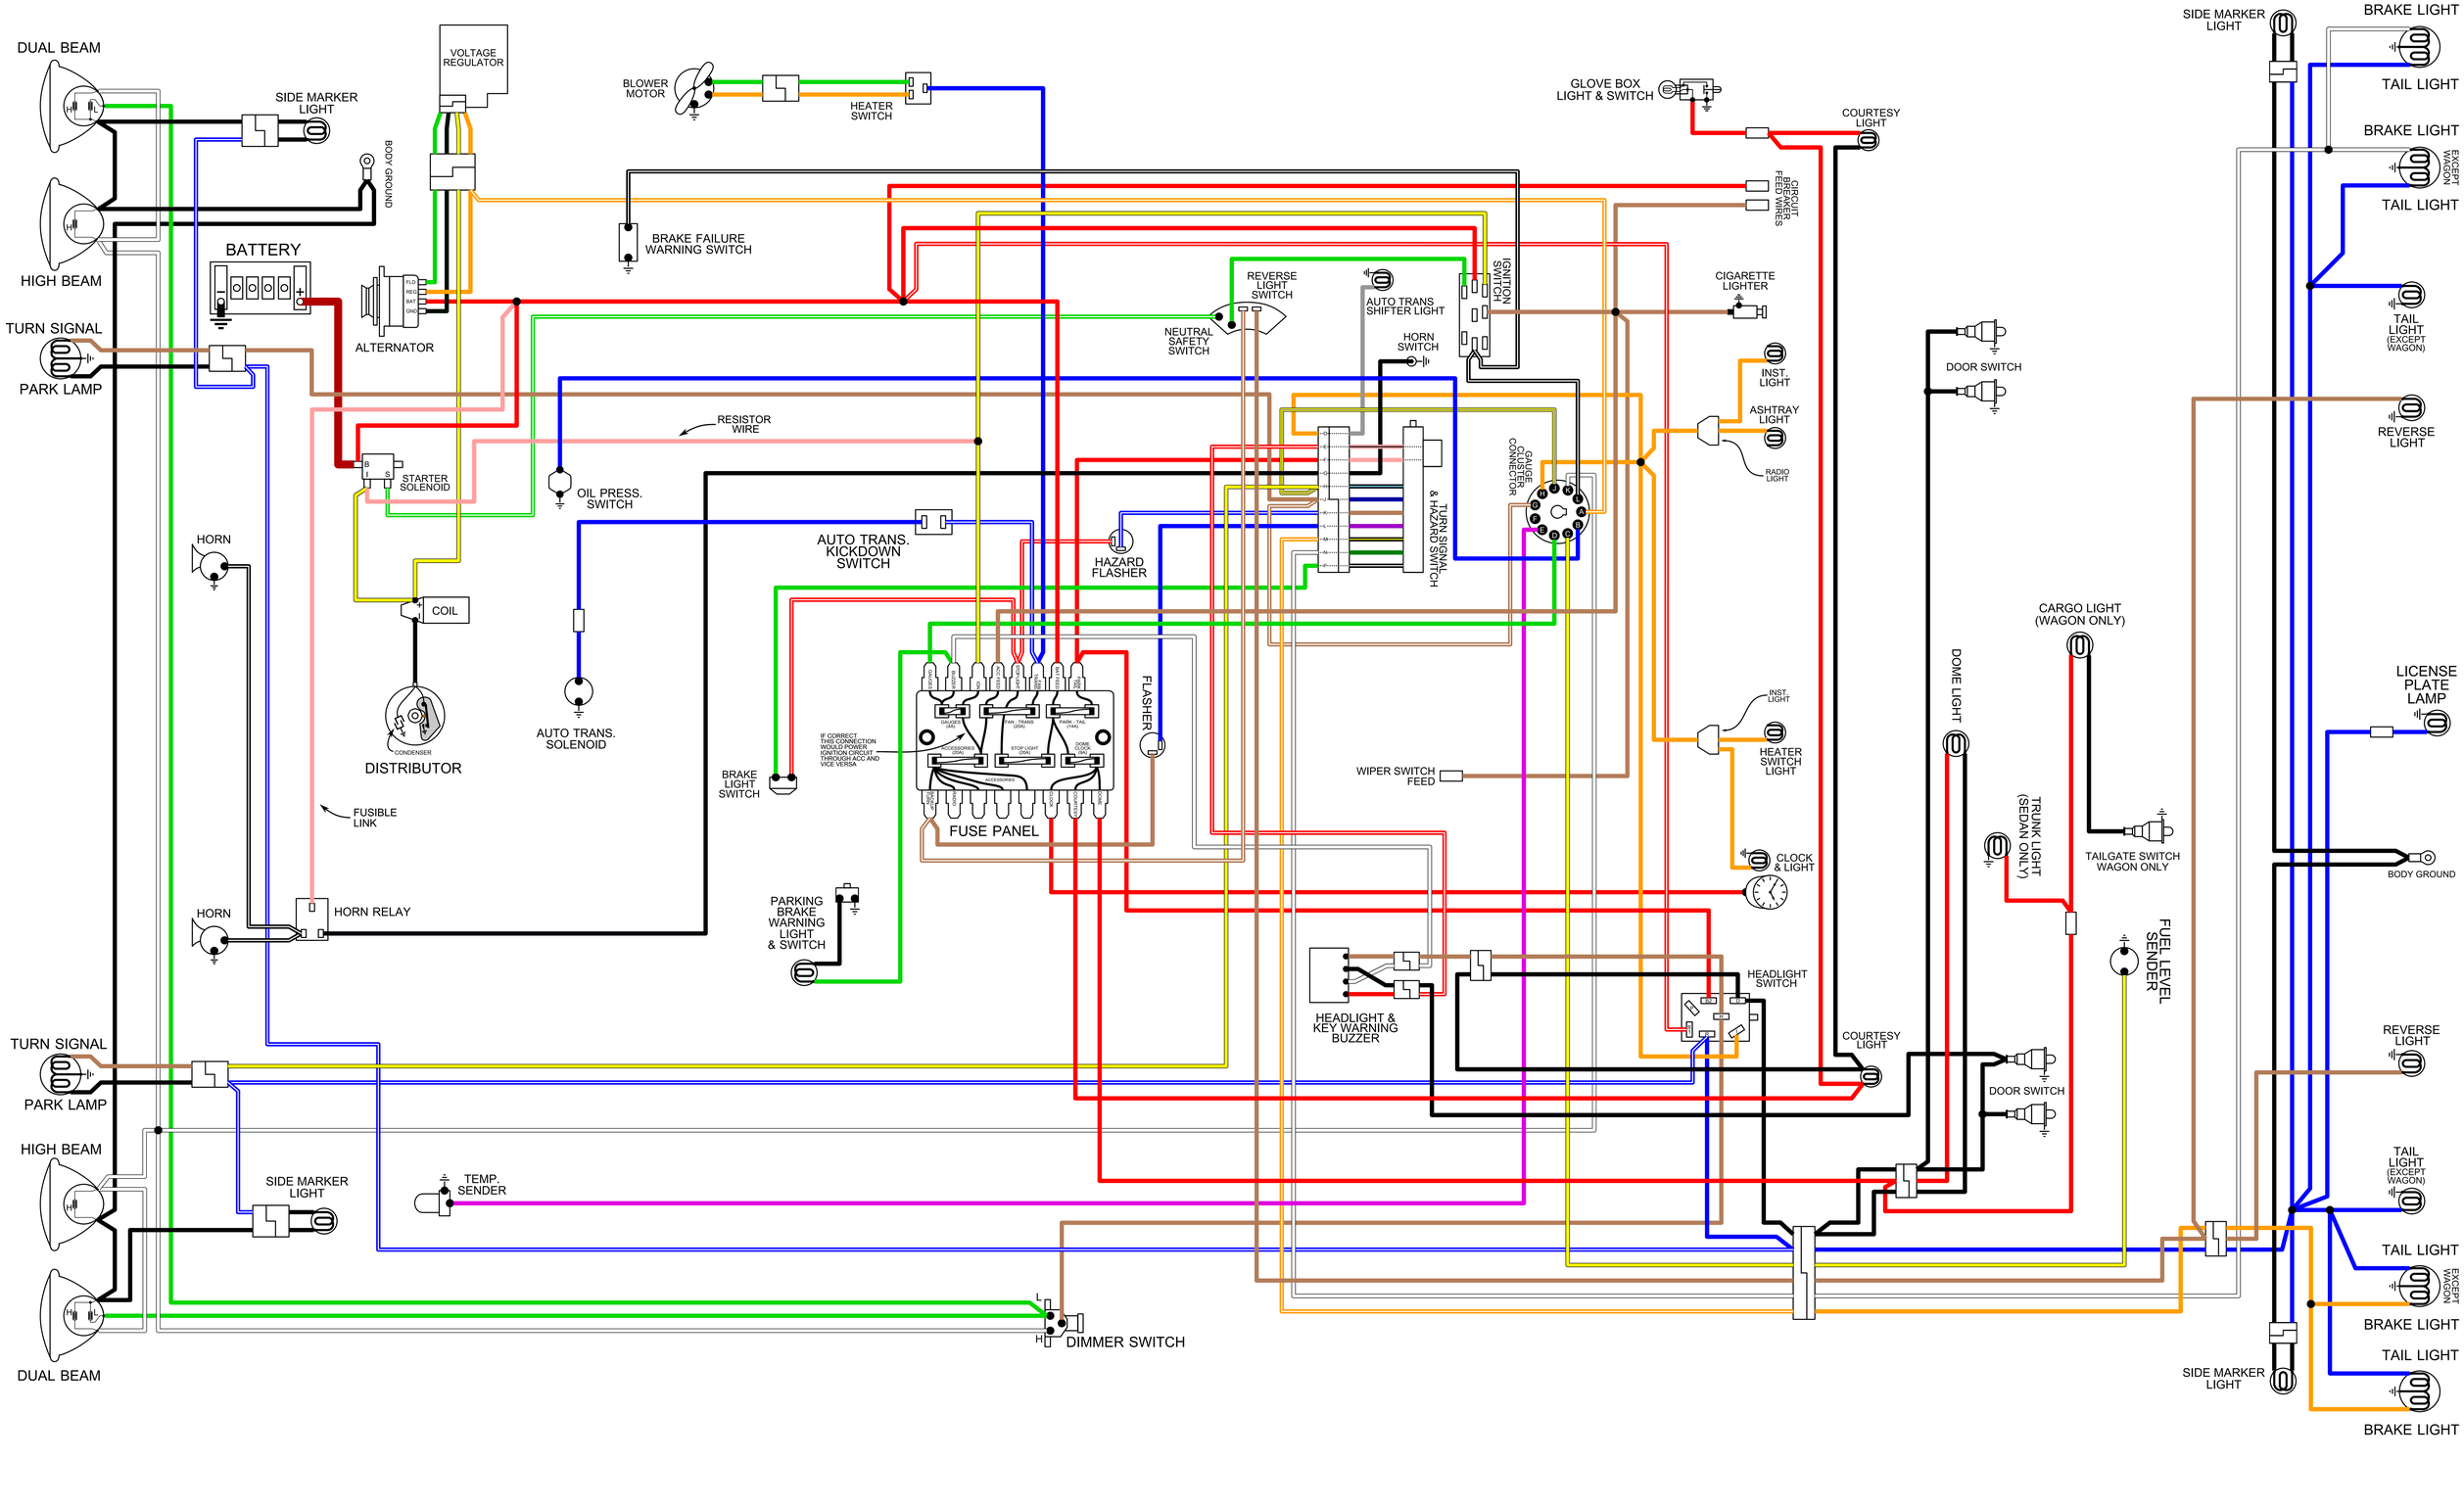

CINCO

1970 AMC AMBASSADOR
MAIN POWER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
VOLTAGE REGULATOR
BODY GROUND
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
STARTER SOLENOID
OIL PRESS. SWITCH
HORN
COIL
CONDENSER
DISTRIBUTOR
FUSIBLE LINK
HORN RELAY
AUTO TRANS. KICKDOWN SWITCH
AUTO TRANS. SOLENOID
BRAKE LIGHT SWITCH
HAZARD FLASHER
FLASHER
FUSE PANEL
PARKING BRAKE WARNING LIGHT & SWITCH
DIMMER SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
HORN SWITCH
IGNITION SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
WIPER SWITCH FEED
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
DOME LIGHT
CARGO LIGHT (WAGON ONLY)
HEATER SWITCH LIGHT
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
CLOCK & LIGHT
FUEL LEVEL SENDER
HEADLIGHT SWITCH
HEADLIGHT & KEY WARNING BUZZER
COURTESY LIGHT
DOOR SWITCH
BODY GROUND
LICENSE PLATE LAMP
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
SIDE MARKER LIGHT
TEMP. SENDER
SIDE MARKER LIGHT
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT

CINCO

1970 AMC AMBASSADOR
ACCESSORY POWER


DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
VOLTAGE REGULATOR
BODY GROUND
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
STARTER SOLENOID
OIL PRESS. SWITCH
HORN
COIL
CONDENSER
DISTRIBUTOR
AUTO TRANS. SOLENOID
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
FROM BATTERY
IGNITION SWITCH
AUTO TRANS SHIFTER LIGHT
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
FLASHER
IF CORRECT THIS CONNECTION WOULD POWER IGNITION CIRCUIT THROUGH ACC AND VICE VERSA
BRAKE LIGHT SWITCH
FUSE PANEL
WIPER SWITCH FEED
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
CARGO LIGHT (WAGON ONLY)
DOME LIGHT
HEATER SWITCH LIGHT
CLOCK & LIGHT
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
BODY GROUND
FUEL LEVEL SENDER
HEADLIGHT SWITCH
HEADLIGHT & KEY WARNING BUZZER
COURTESY LIGHT
DOOR SWITCH
SIDE MARKER LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
LICENSE PLATE LAMP
HORN
HORN RELAY
PARKING BRAKE WARNING LIGHT & SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
TEMP. SENDER
DIMMER SWITCH
SIDE MARKER LIGHT
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
REVERSE LIGHT
TAIL LIGHT (EXCEPT WAGON)
LICENSE PLATE LAMP
BODY GROUND
FUEL LEVEL SENDER
TAILGATE SWITCH WAGON ONLY
TRUNK LIGHT (SEDAN ONLY)
CLOCK & LIGHT
HEATER SWITCH LIGHT
DOME LIGHT
CARGO LIGHT (WAGON ONLY)
CIRCUIT BREAKER FEED WIRES
COURTESY LIGHT
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
GLOVE BOX LIGHT & SWITCH
HEADLIGHT SWITCH
HEADLIGHT & KEY WARNING BUZZER
WIPER SWITCH FEED
FLASHER
BRAKE LIGHT SWITCH
FUSE PANEL
HORN
HORN RELAY
PARKING BRAKE WARNING LIGHT & SWITCH
DISTRIBUTOR
AUTO TRANS. SOLENOID
OIL PRESS. SWITCH
STARTER SOLENOID
ALTERNATOR
BATTERY
BRAKE FAILURE WARNING SWITCH
BLOWER MOTOR
VOLTAGE REGULATOR
SIDE MARKER LIGHT
DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP

CINCO

1970 AMC AMBASSADOR
IGNITION SYSTEM


DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
BODY GROUND
VOLTAGE REGULATOR
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
STARTER SOLENOID
B
I
S
COIL
CONDENSER
DISTRIBUTOR
HORN
HORN RELAY
RESISTOR WIRE
OIL PRESS. SWITCH
AUTO TRANS. SOLENOID
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
HORN SWITCH
FROM BATTERY
IGNITION SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
SIDE MARKER LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
CARGO LIGHT (WAGON ONLY)
DOME LIGHT
HEATER SWITCH LIGHT
CLOCK & LIGHT
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
BODY GROUND
FUEL LEVEL SENDER
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
REVERSE LIGHT
LICENSE PLATE LAMP
TAIL LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
BRAKE LIGHT
SIDE MARKER LIGHT
TAIL LIGHT
BRAKE LIGHT
BRAKE LIGHT SWITCH
IF CORRECT THIS CONNECTION WOULD POWER IGNITION CIRCUIT THROUGH ACC AND VICE VERSA.
FUSE PANEL
FLASHER
WIPER SWITCH FEED
PARKING BRAKE WARNING LIGHT & SWITCH
HEADLIGHT & KEY WARNING BUZZER
DIMMER SWITCH
L
H
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
TEMP. SENDER
HORN
HORN RELAY

1970 AMC AMBASSADOR
STARTING SYSTEM

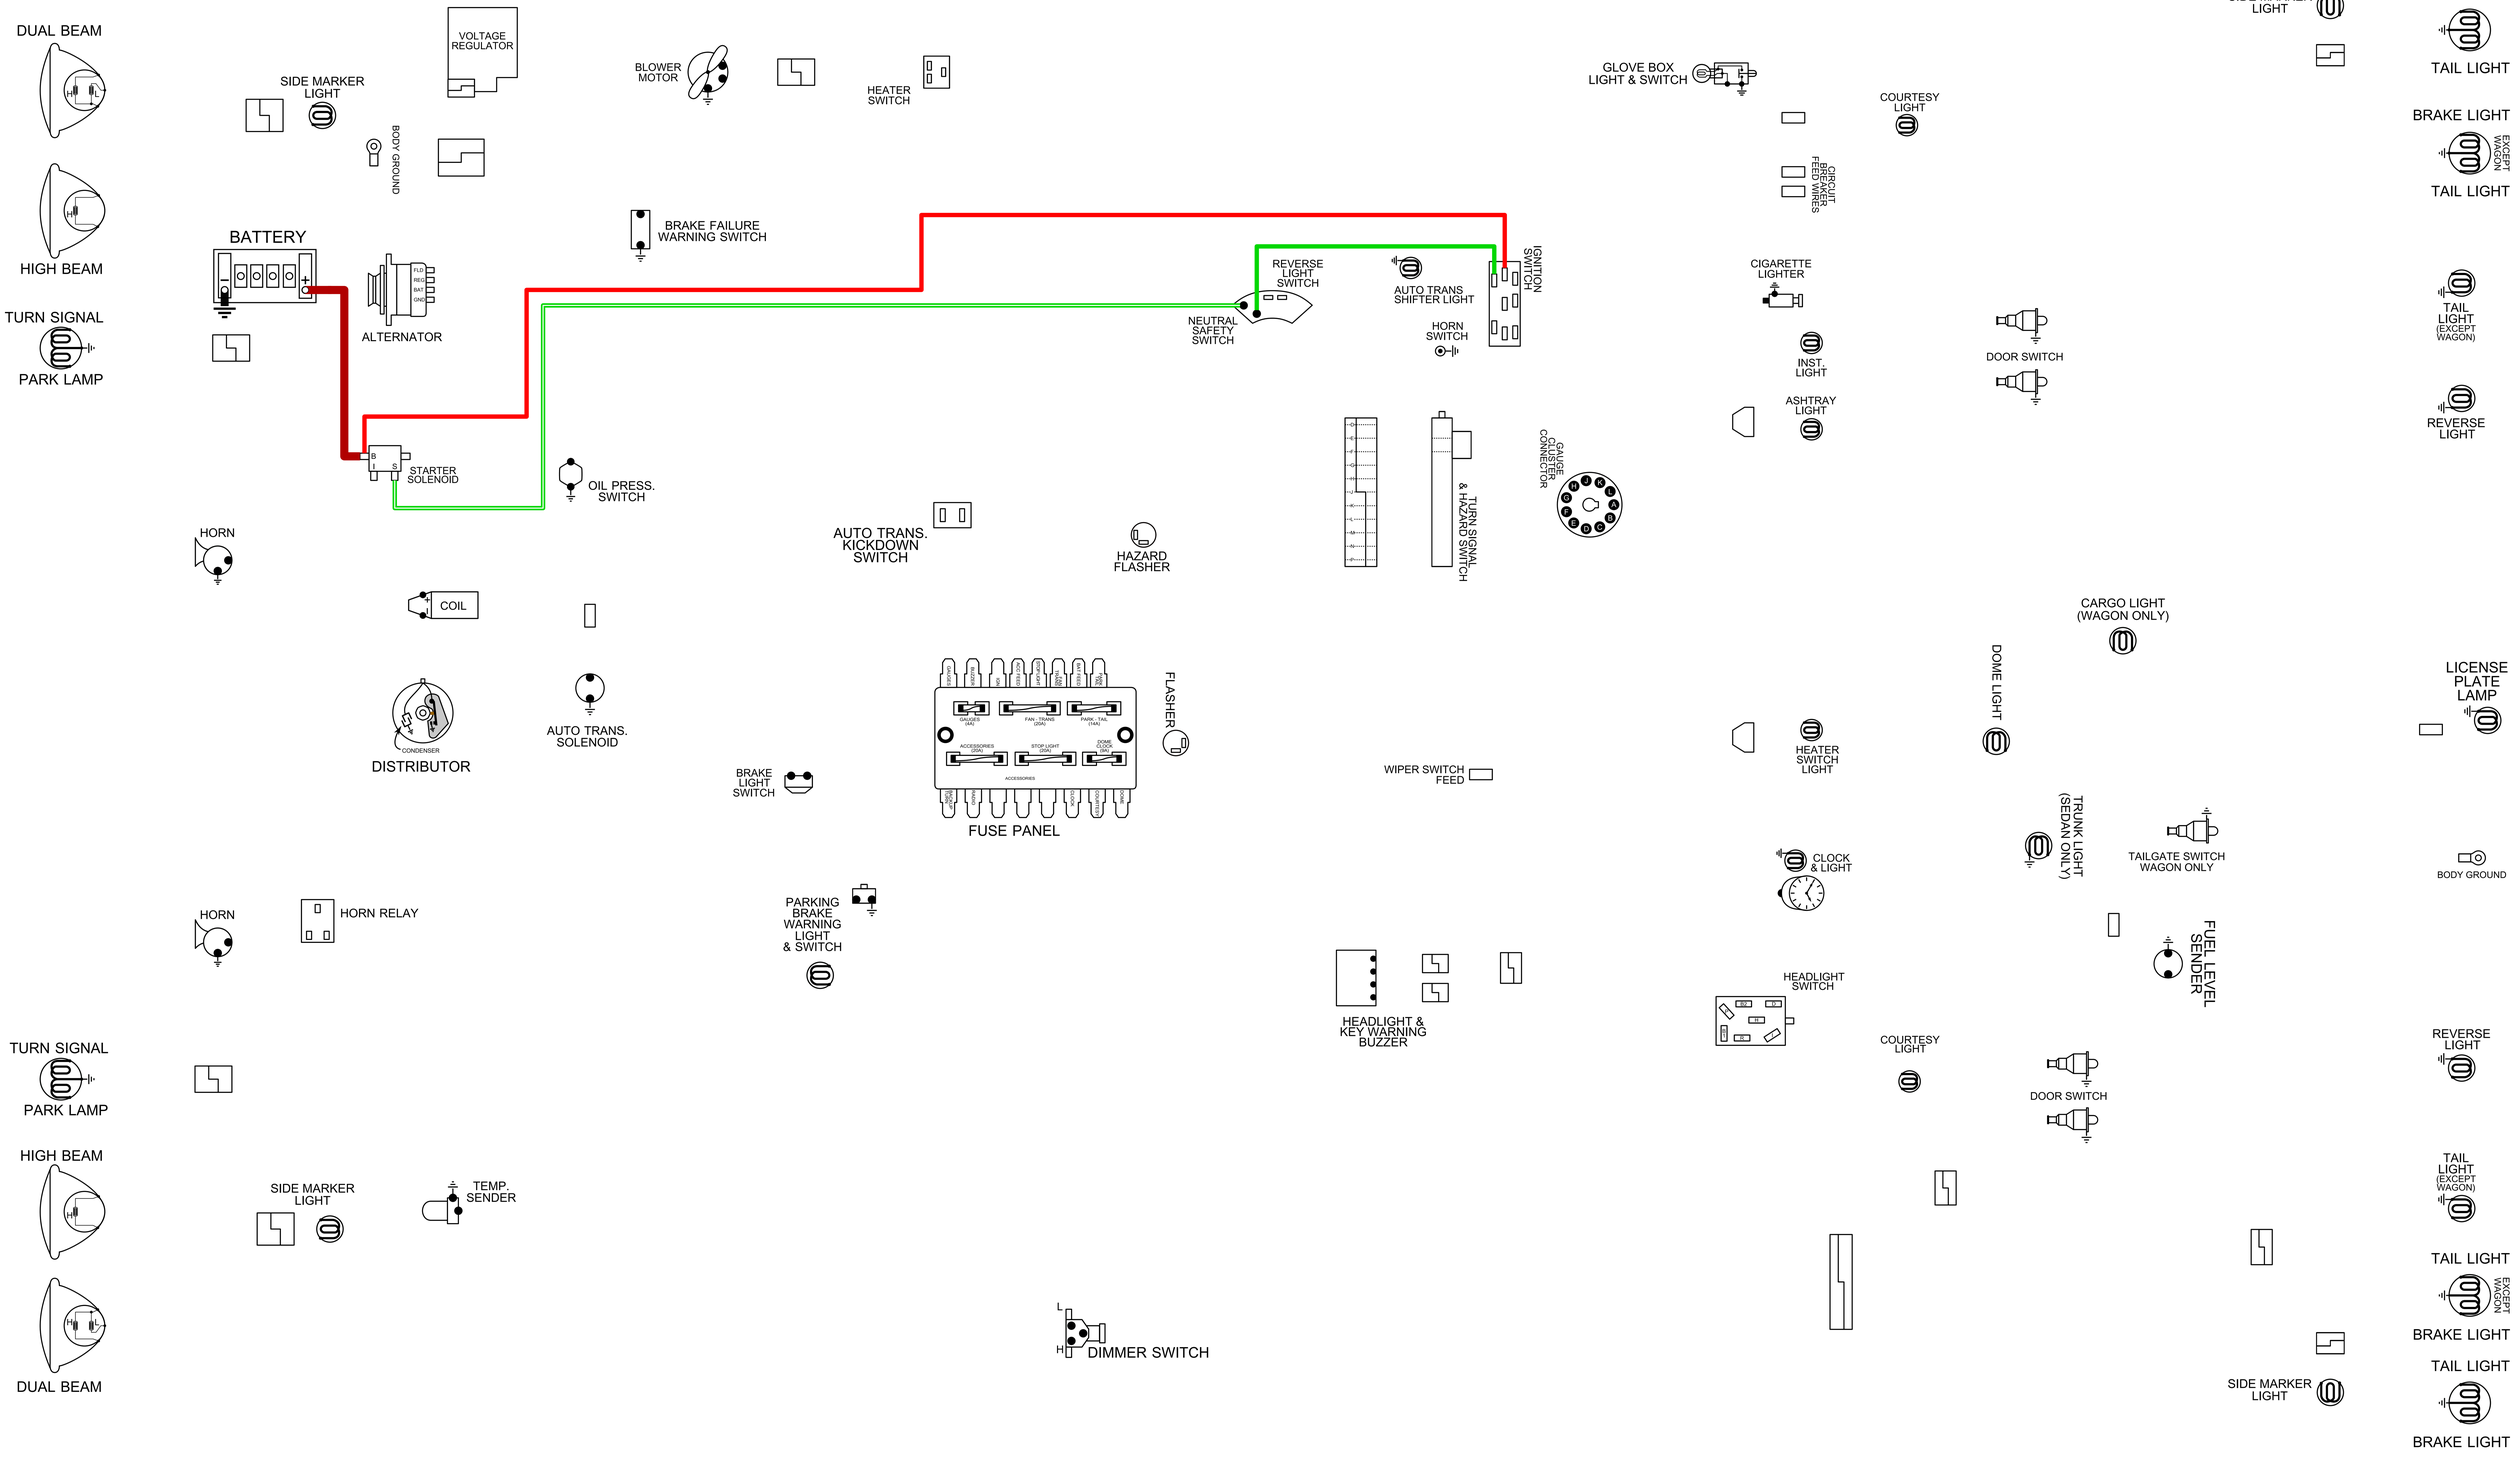


CINCO

1970 AMC AMBASSADOR
CHARGING SYSTEM

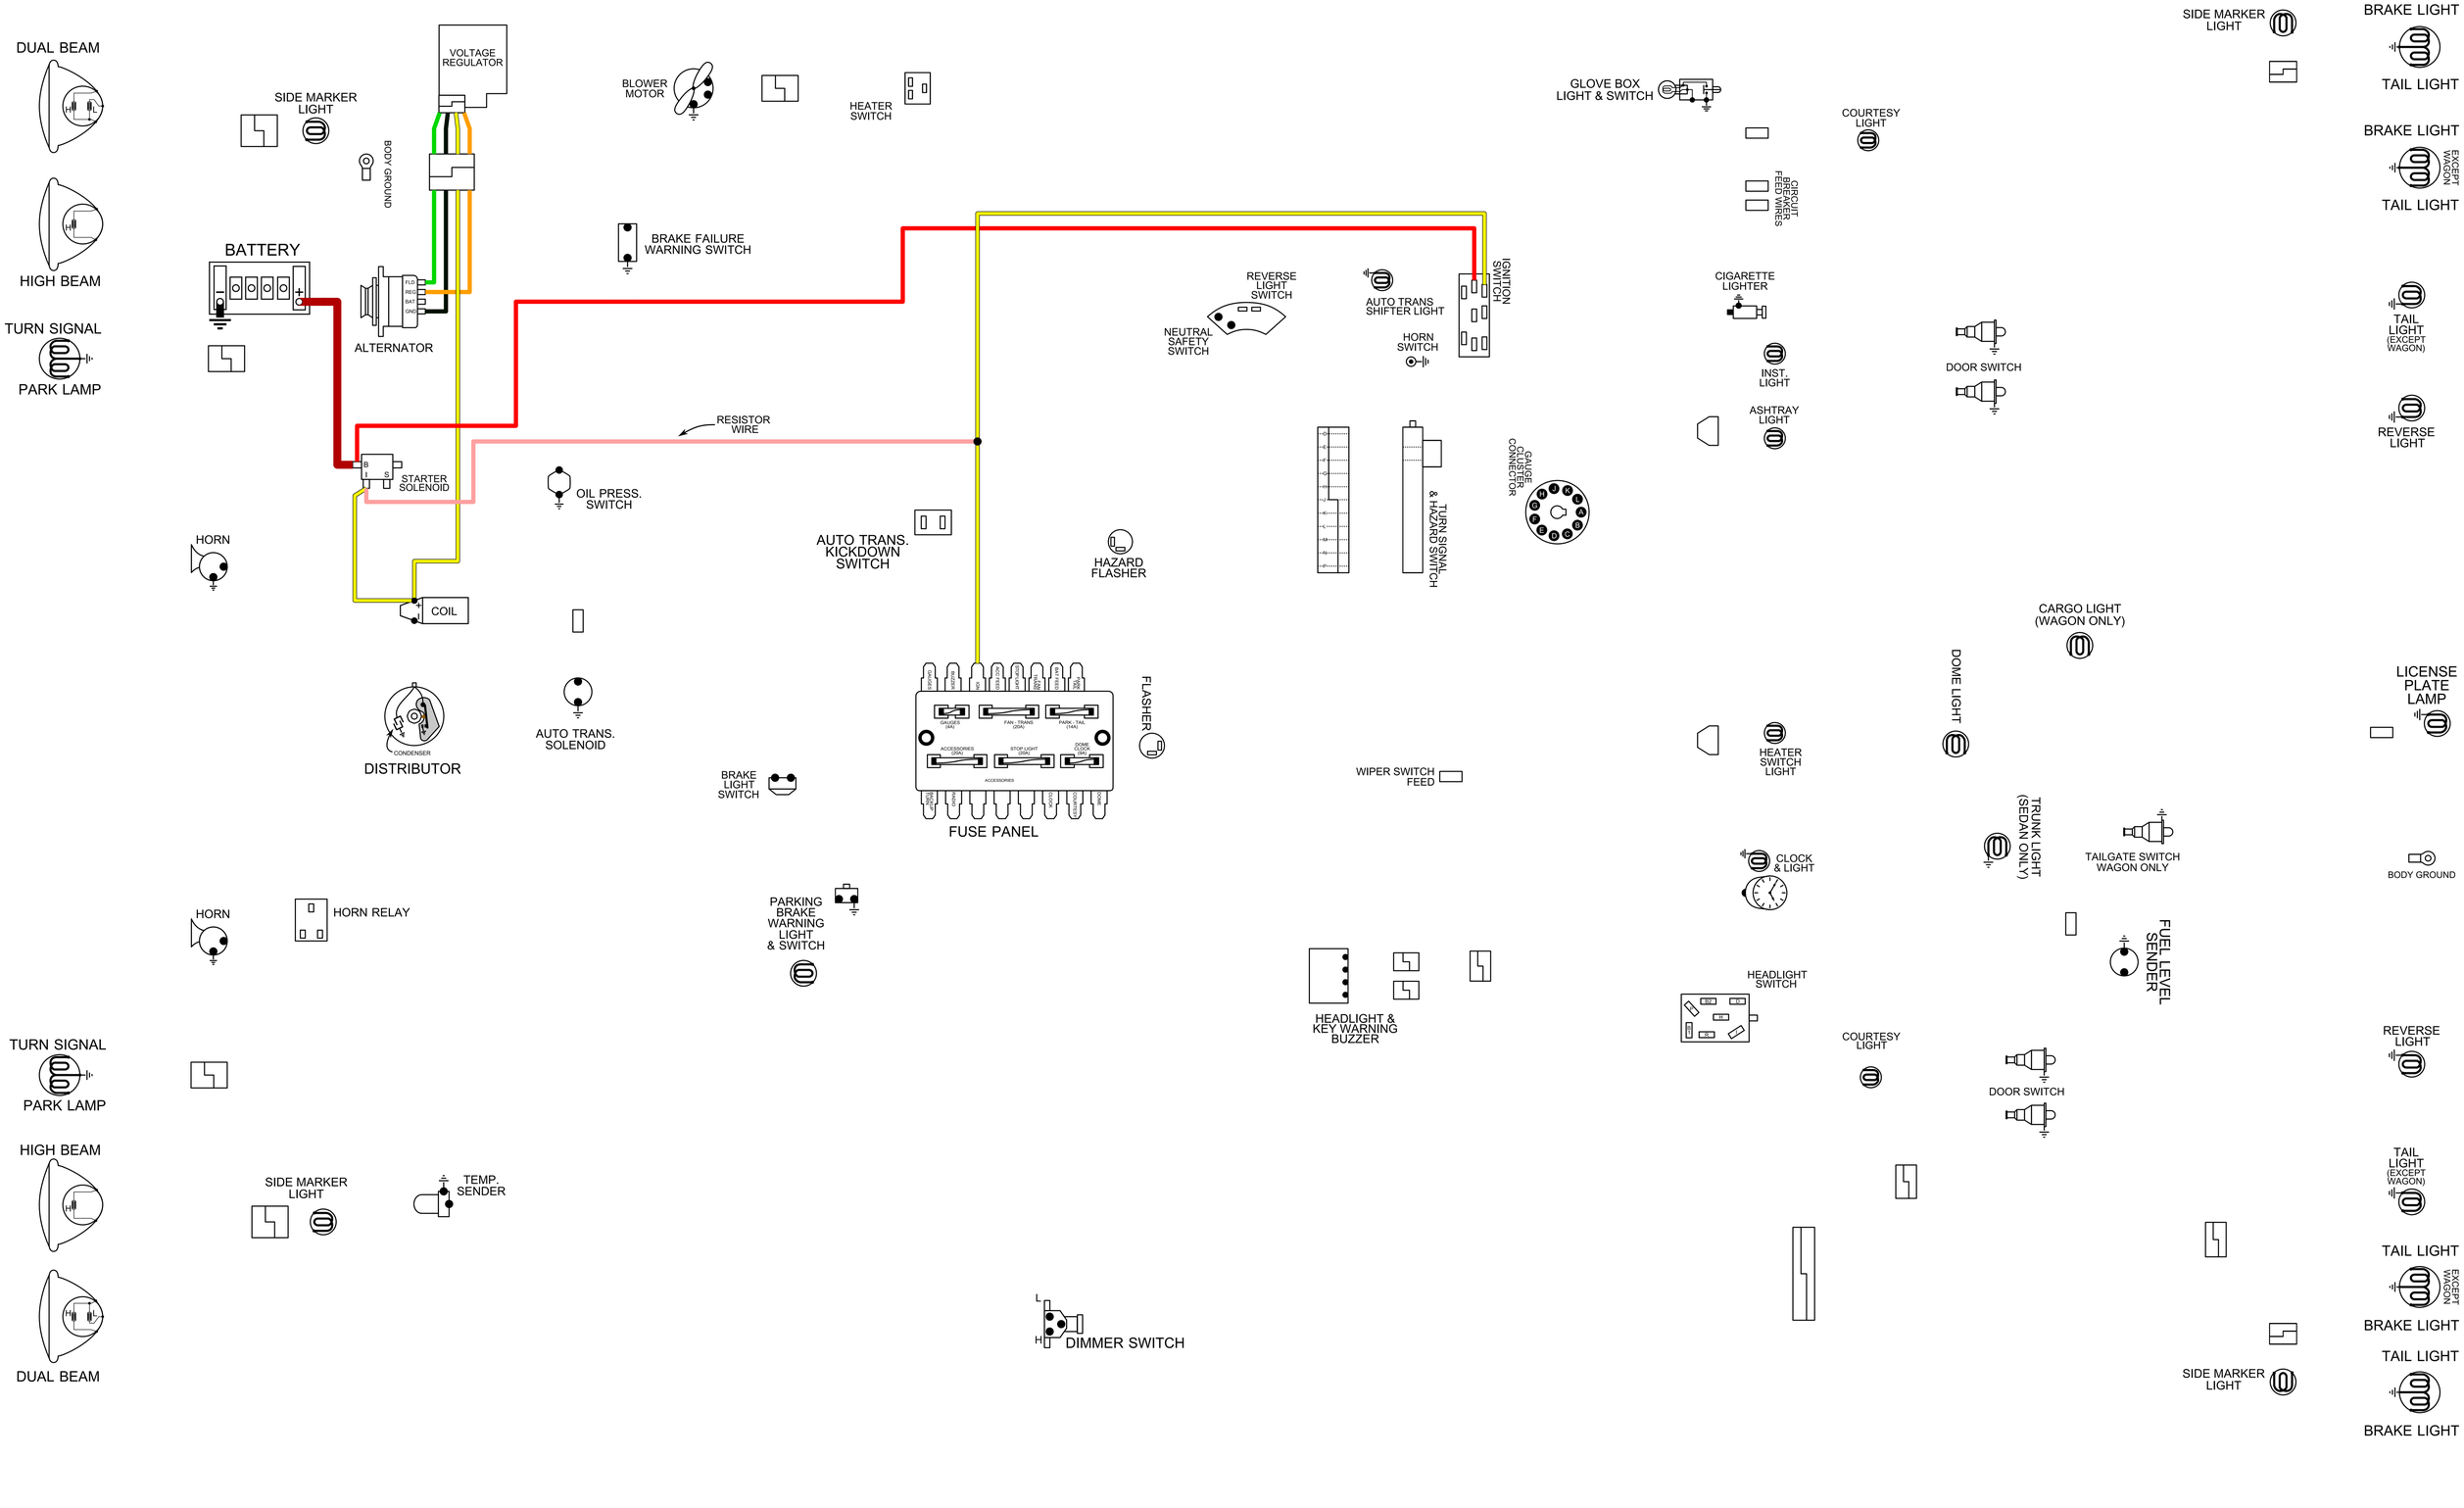


CINCO

1970 AMC AMBASSADOR
HEADLIGHTS

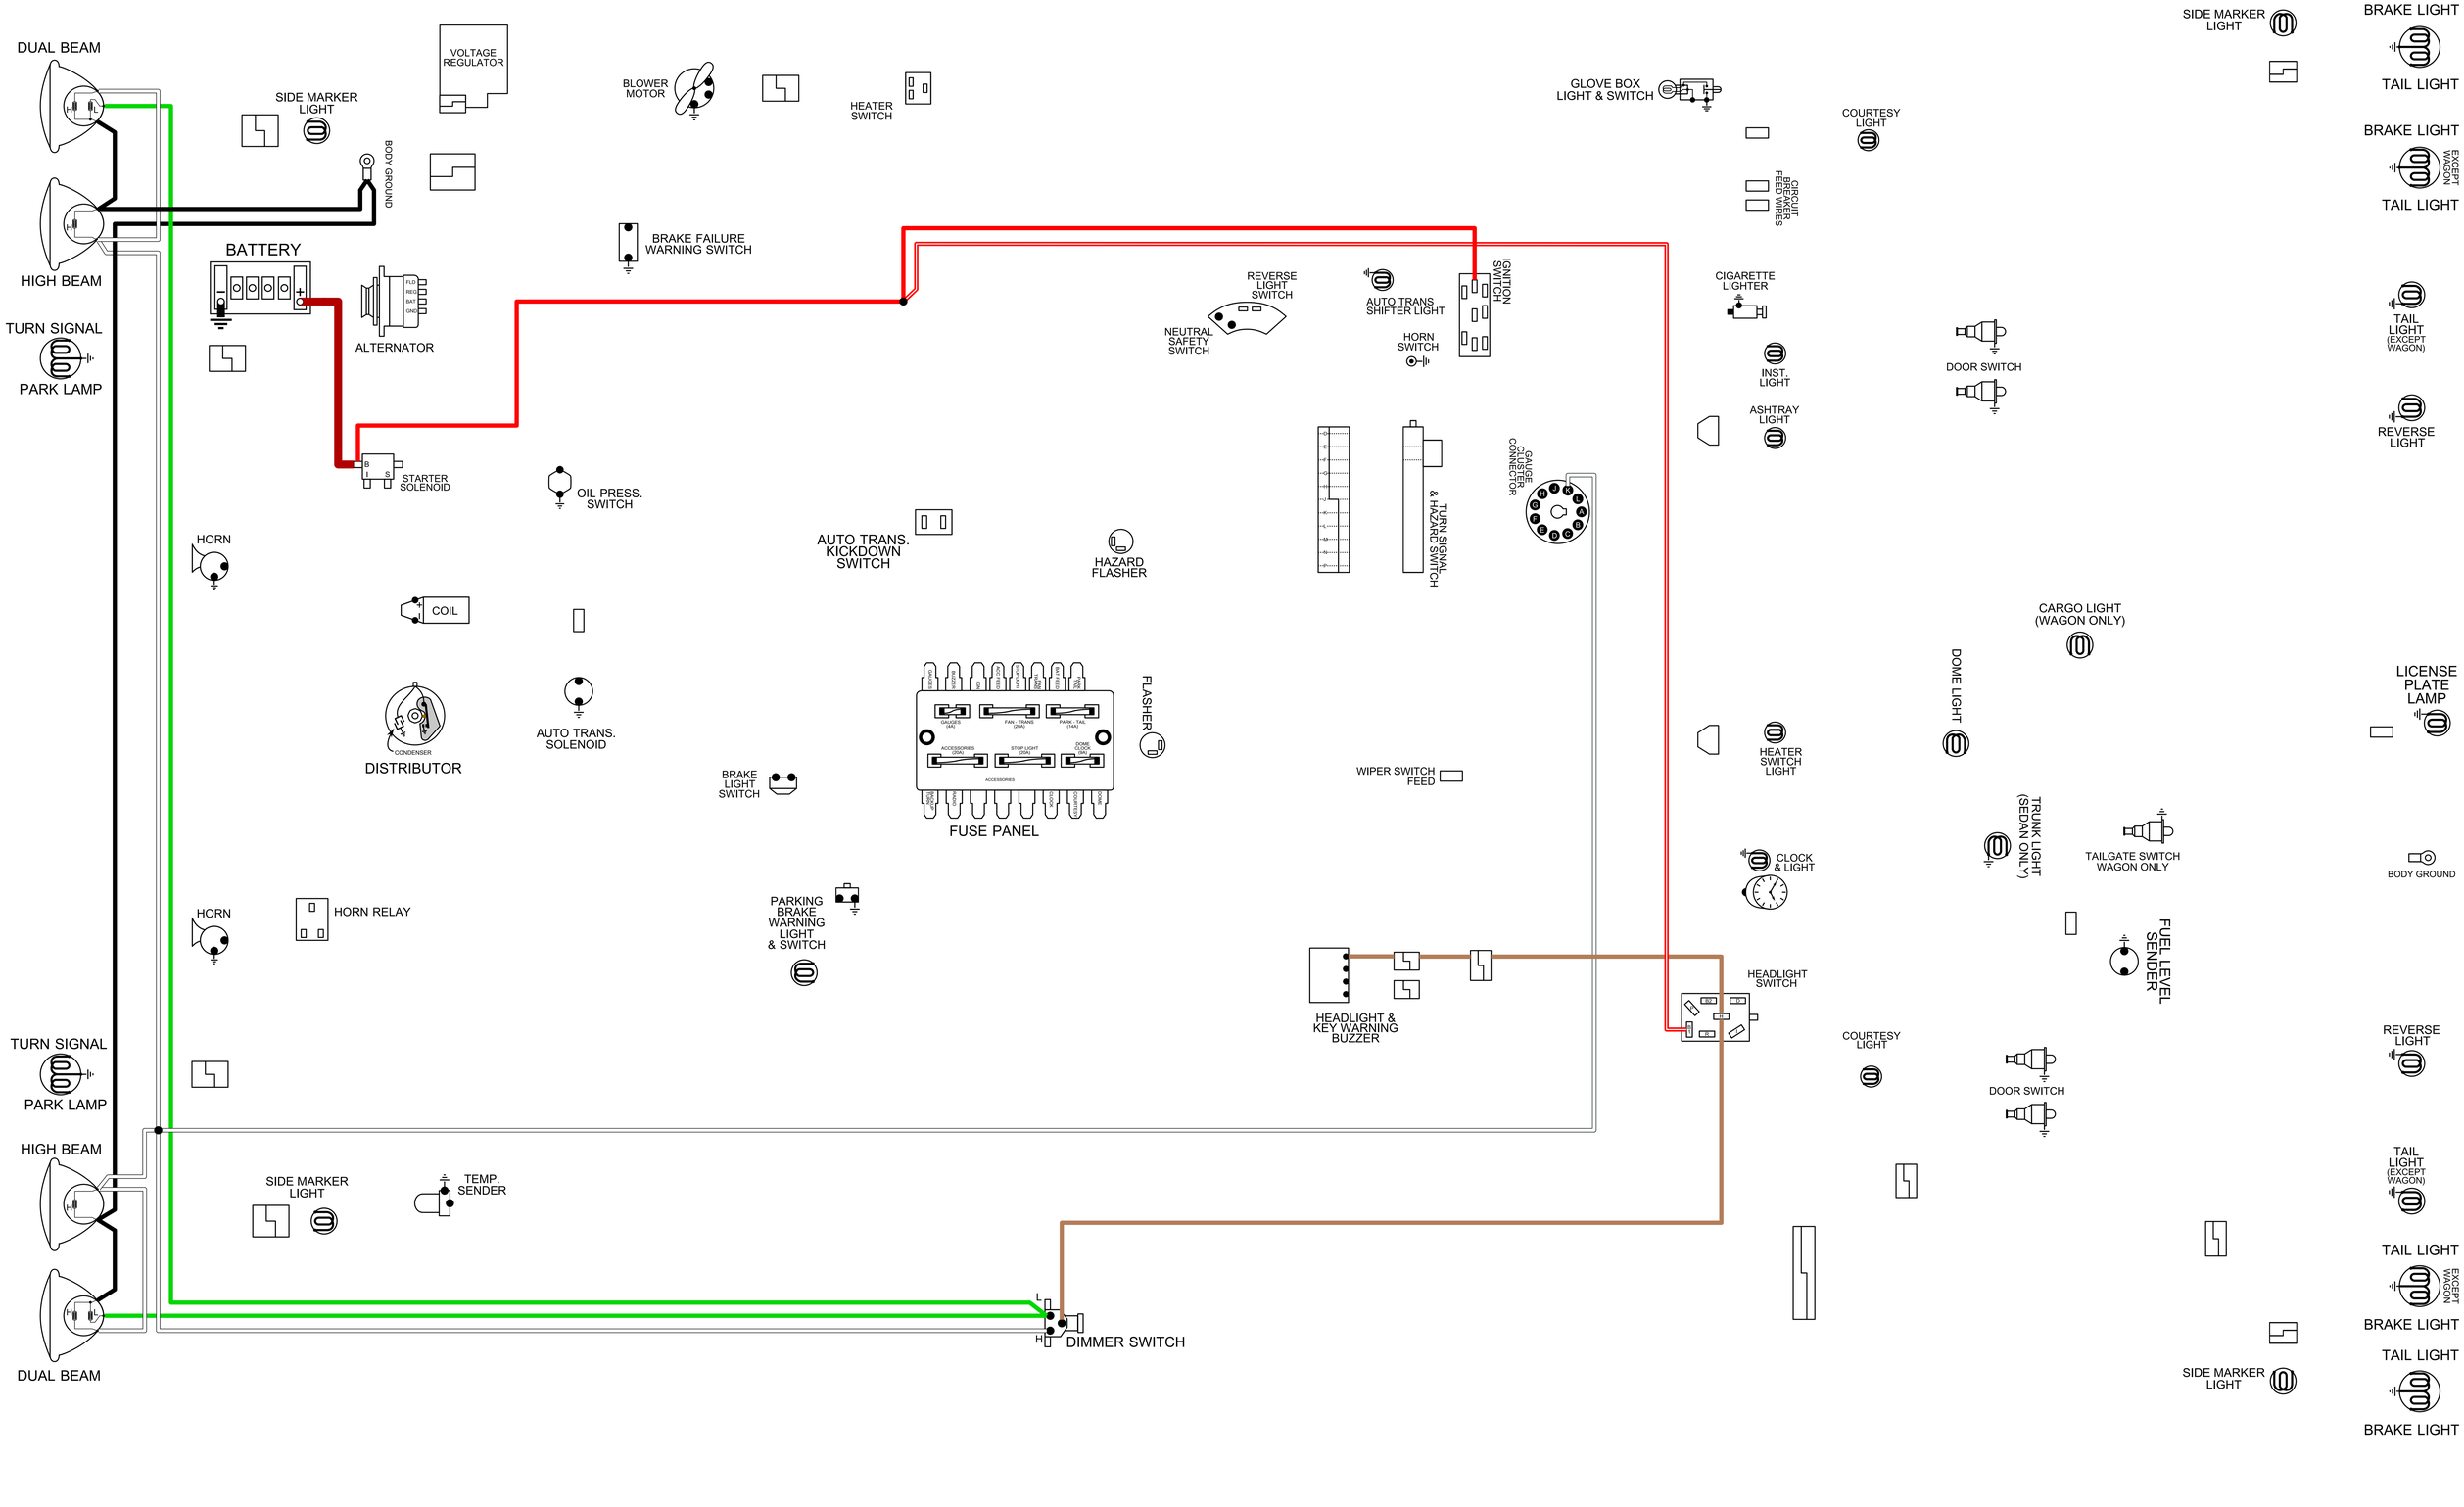


1970 AMC AMBASSADOR
RUNNING LIGHTS

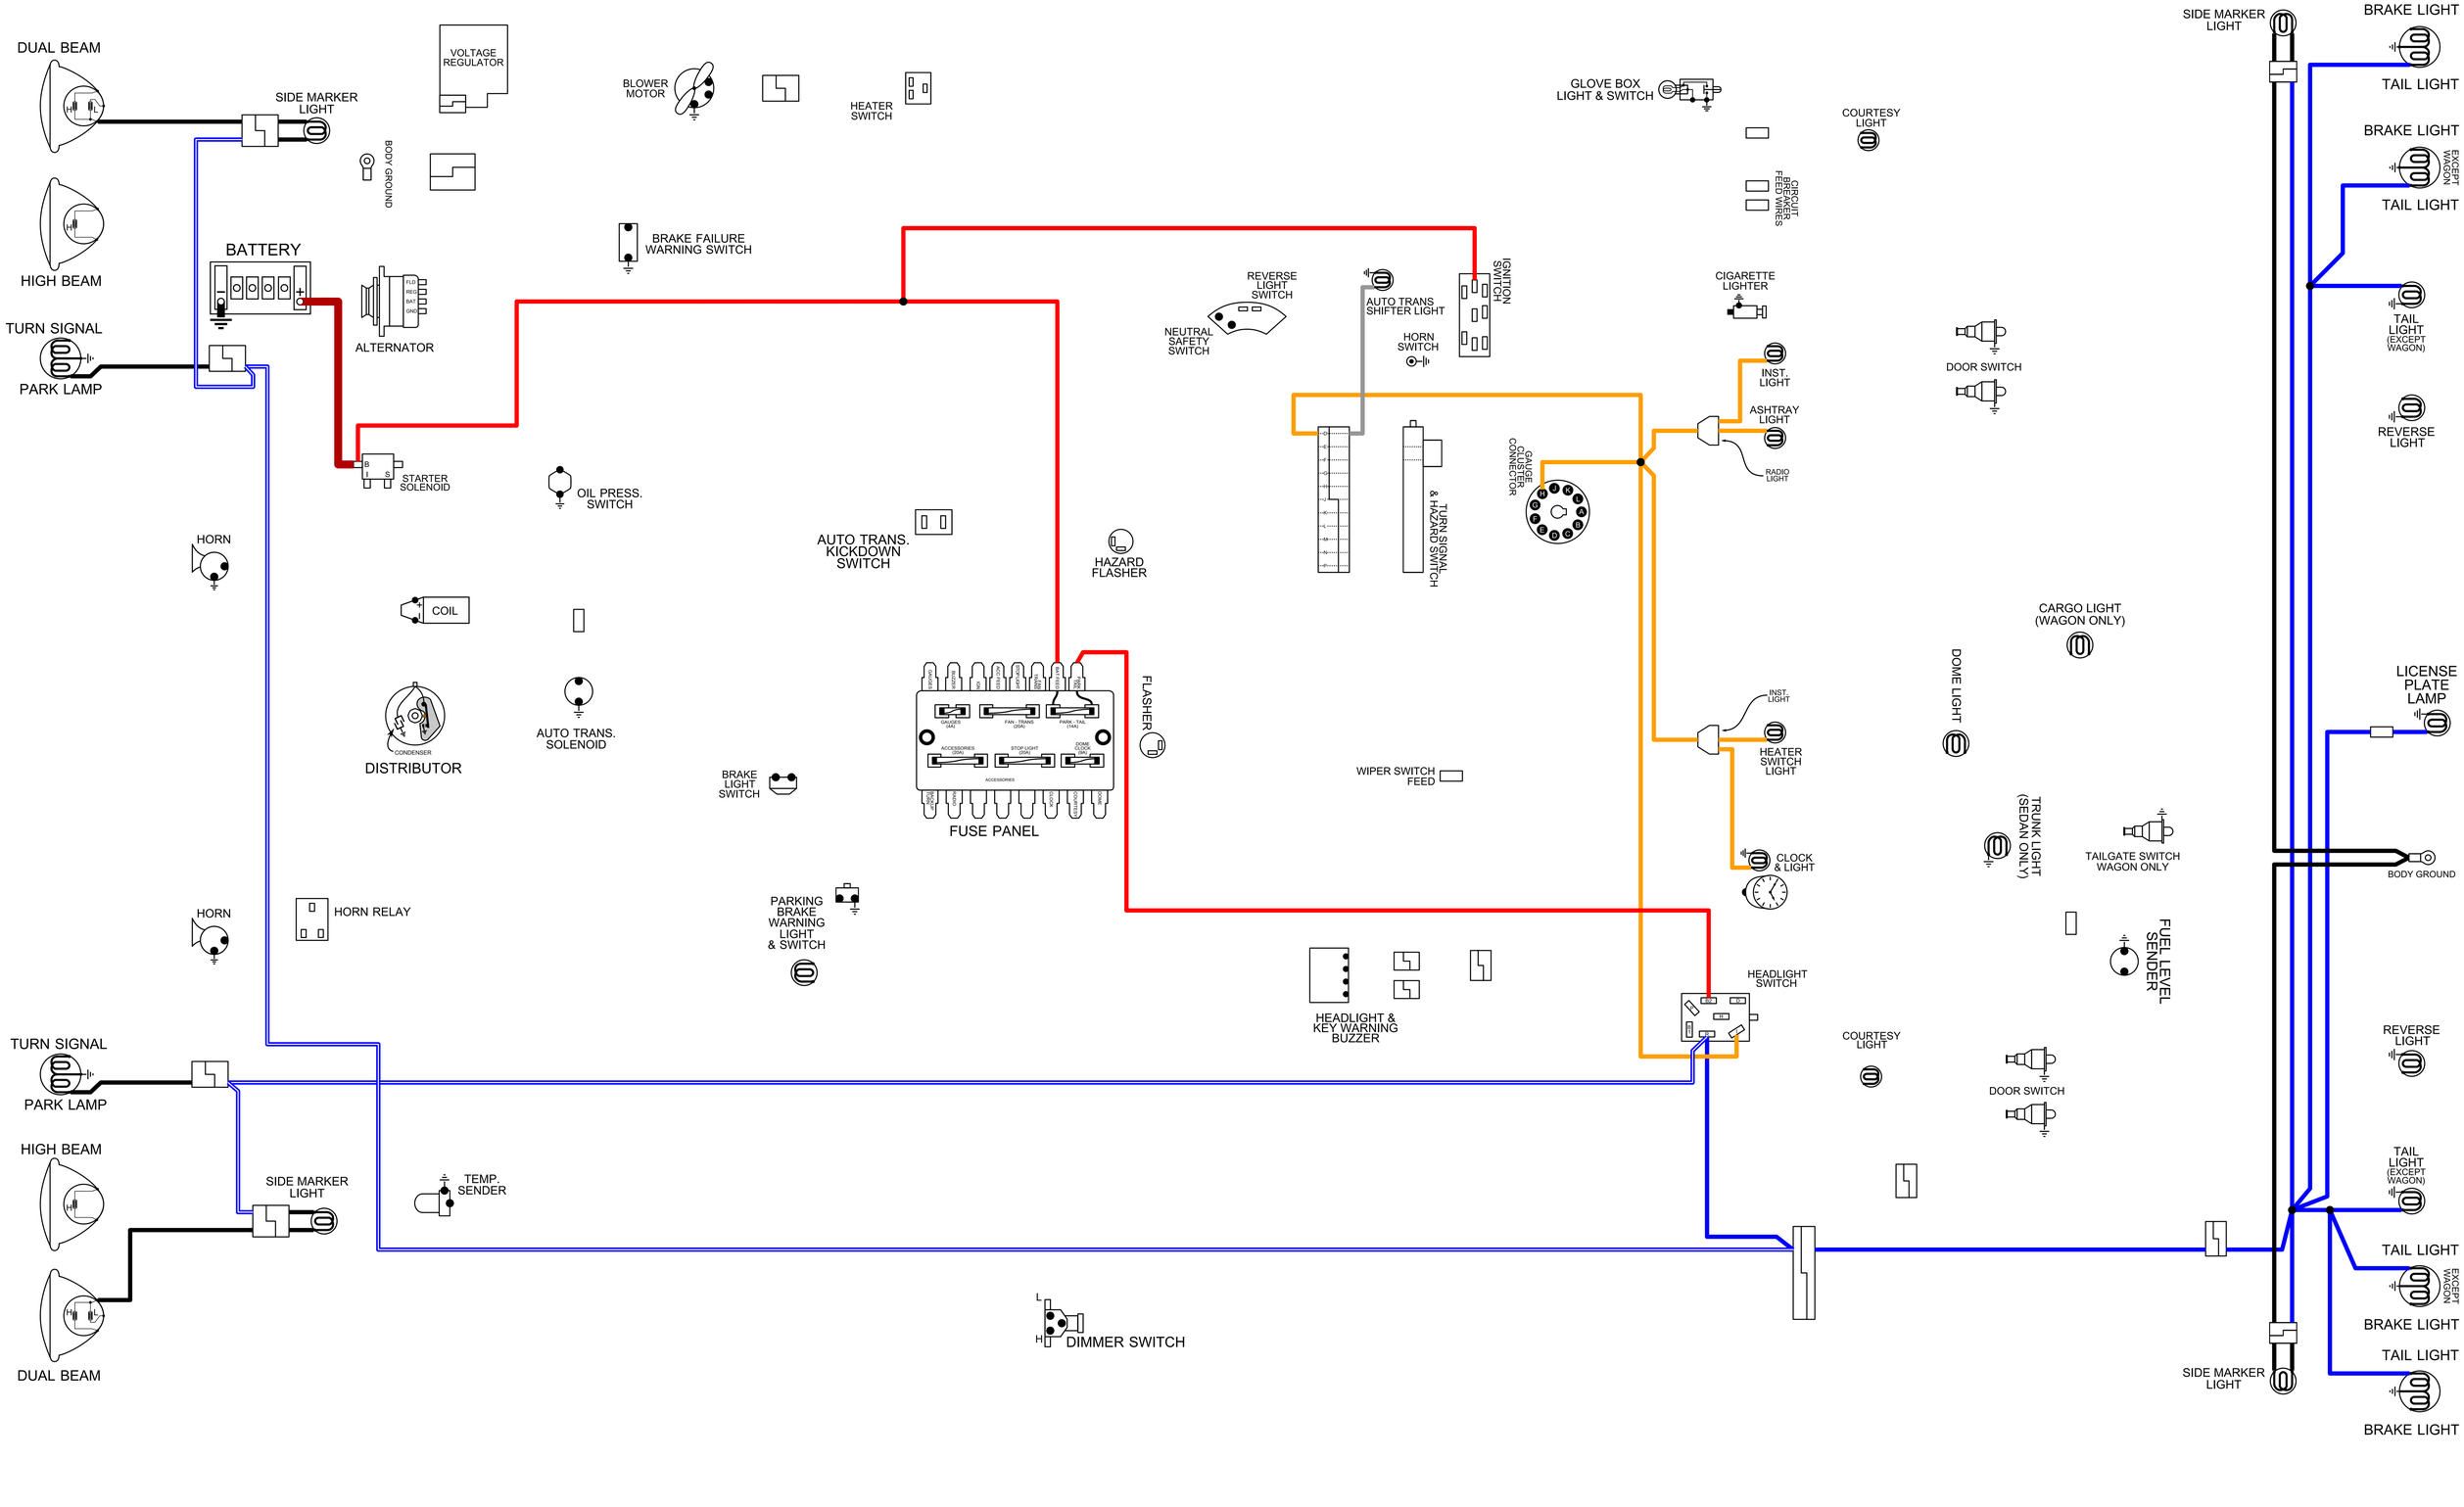


CINCO

1970 AMC AMBASSADOR
BRAKE LIGHTS

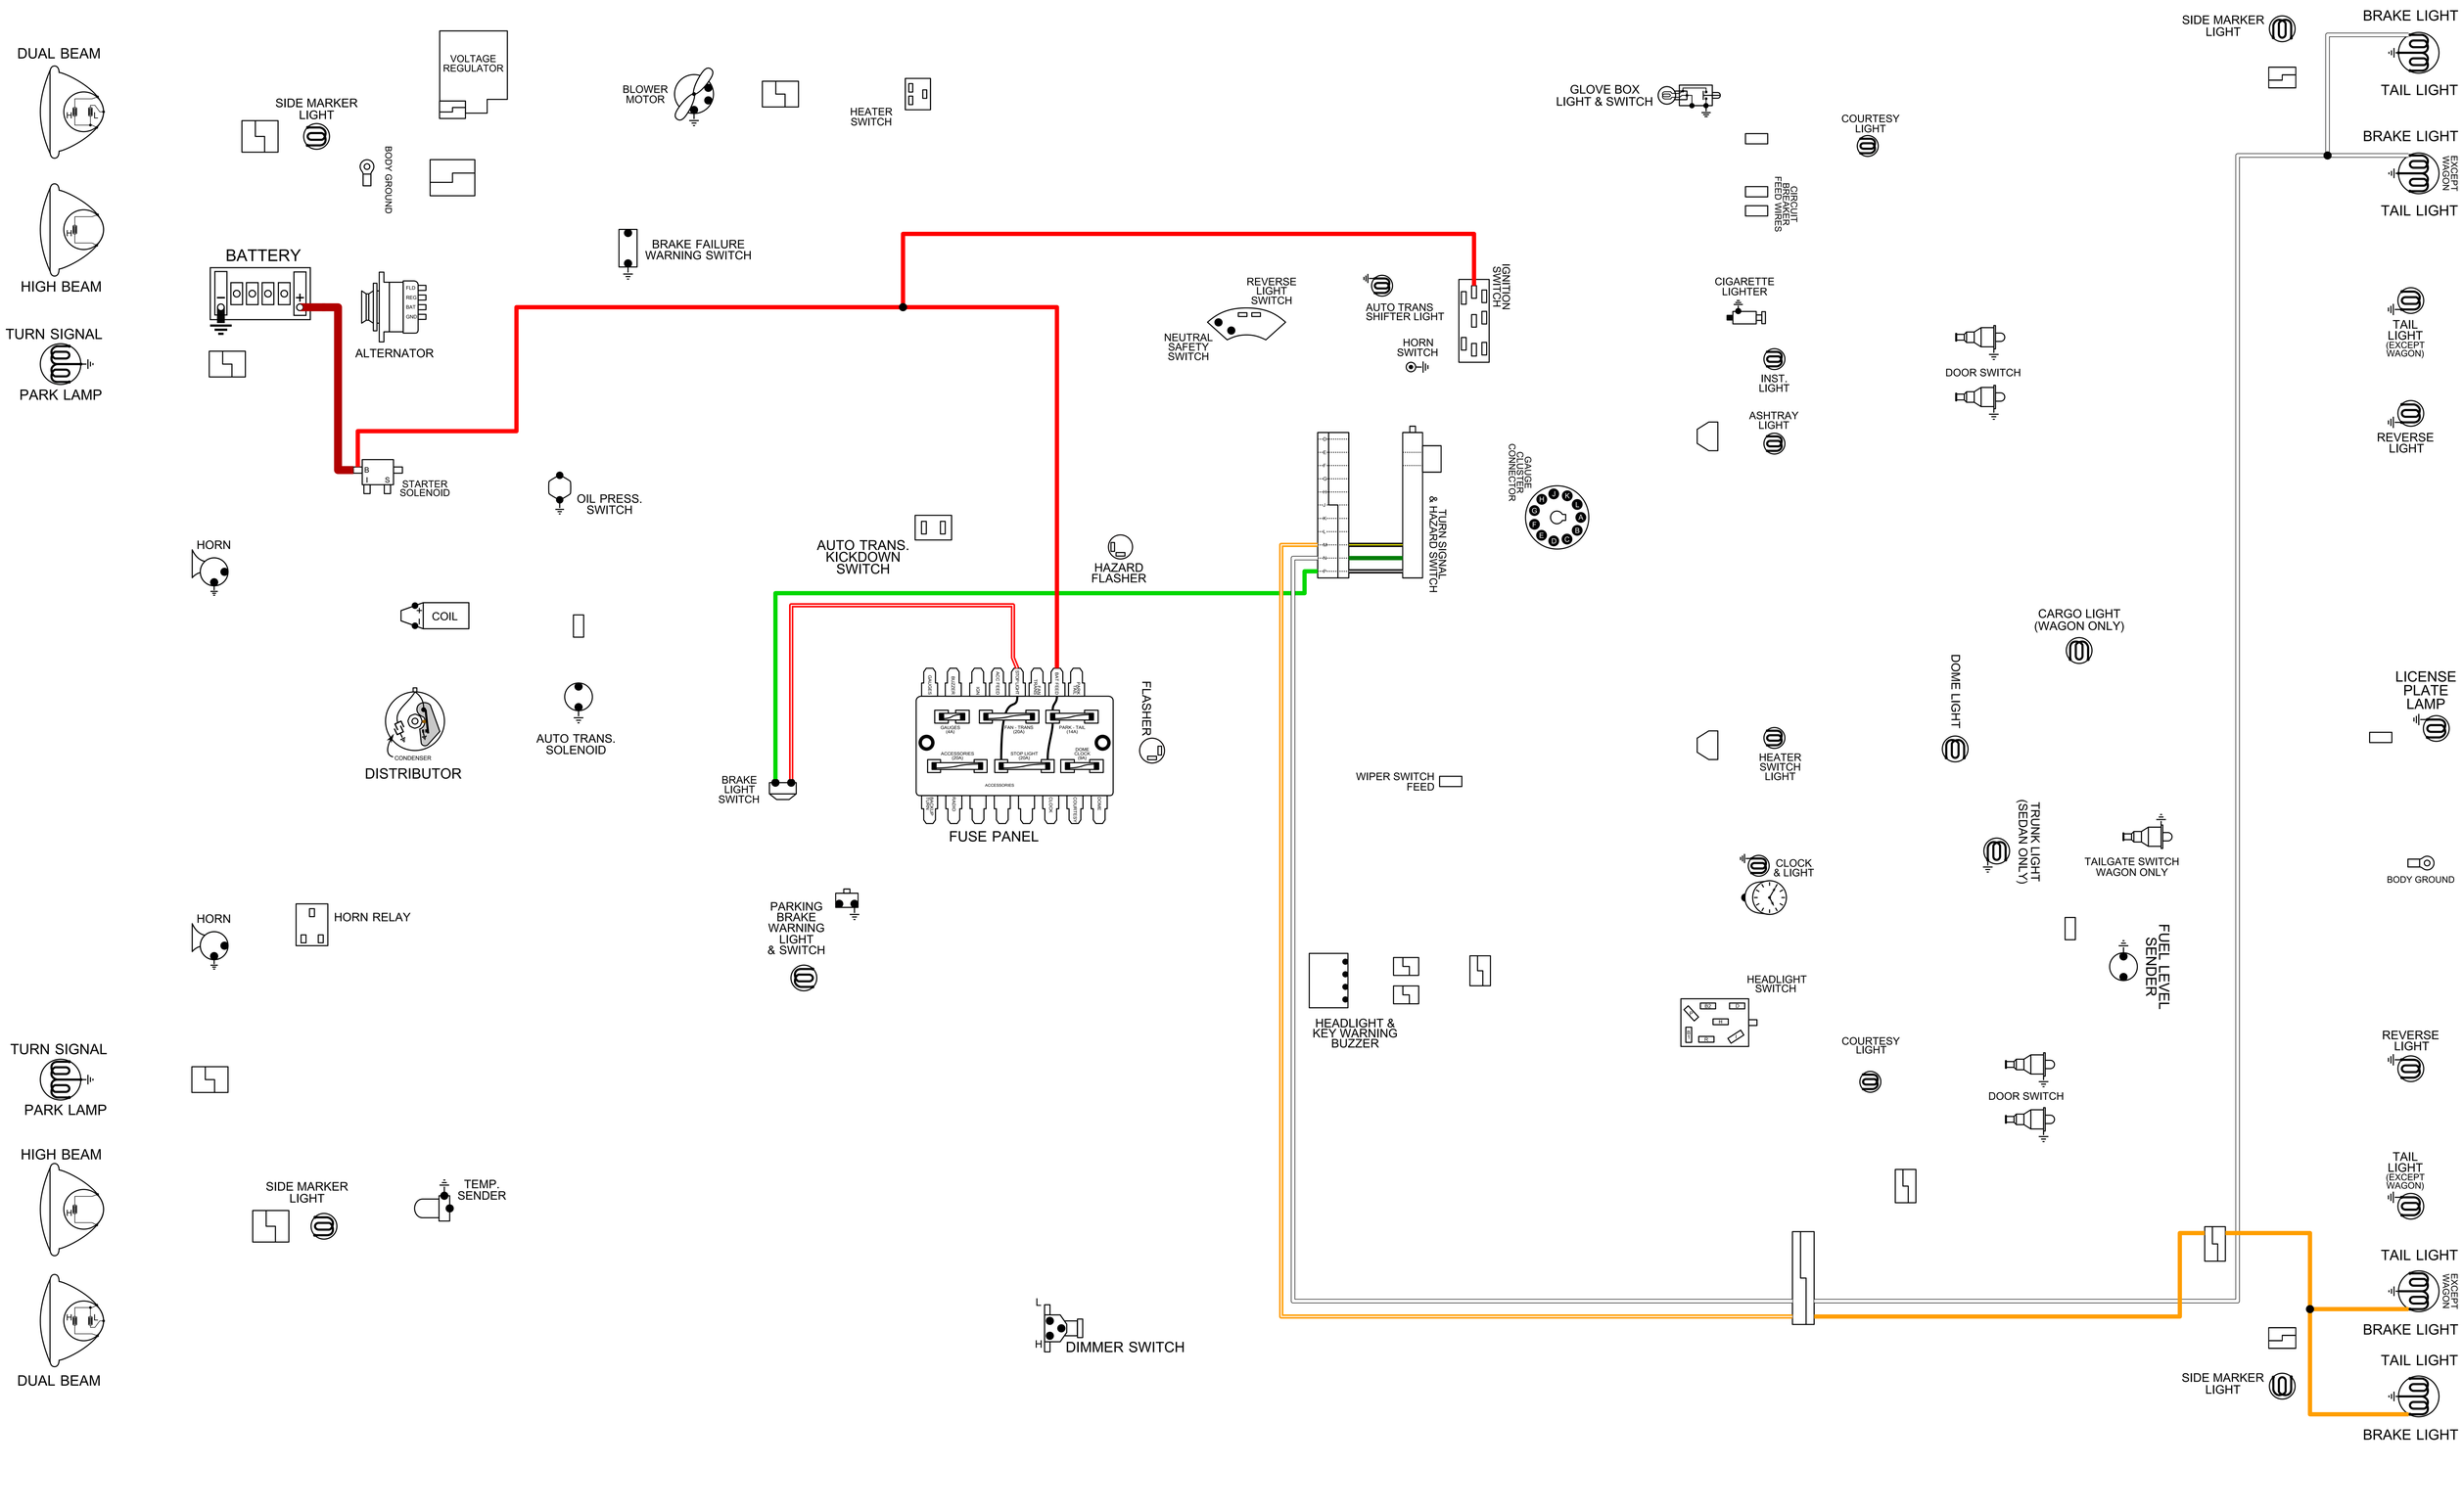

1970 AMC AMBASSADOR
TURN SIGNALS

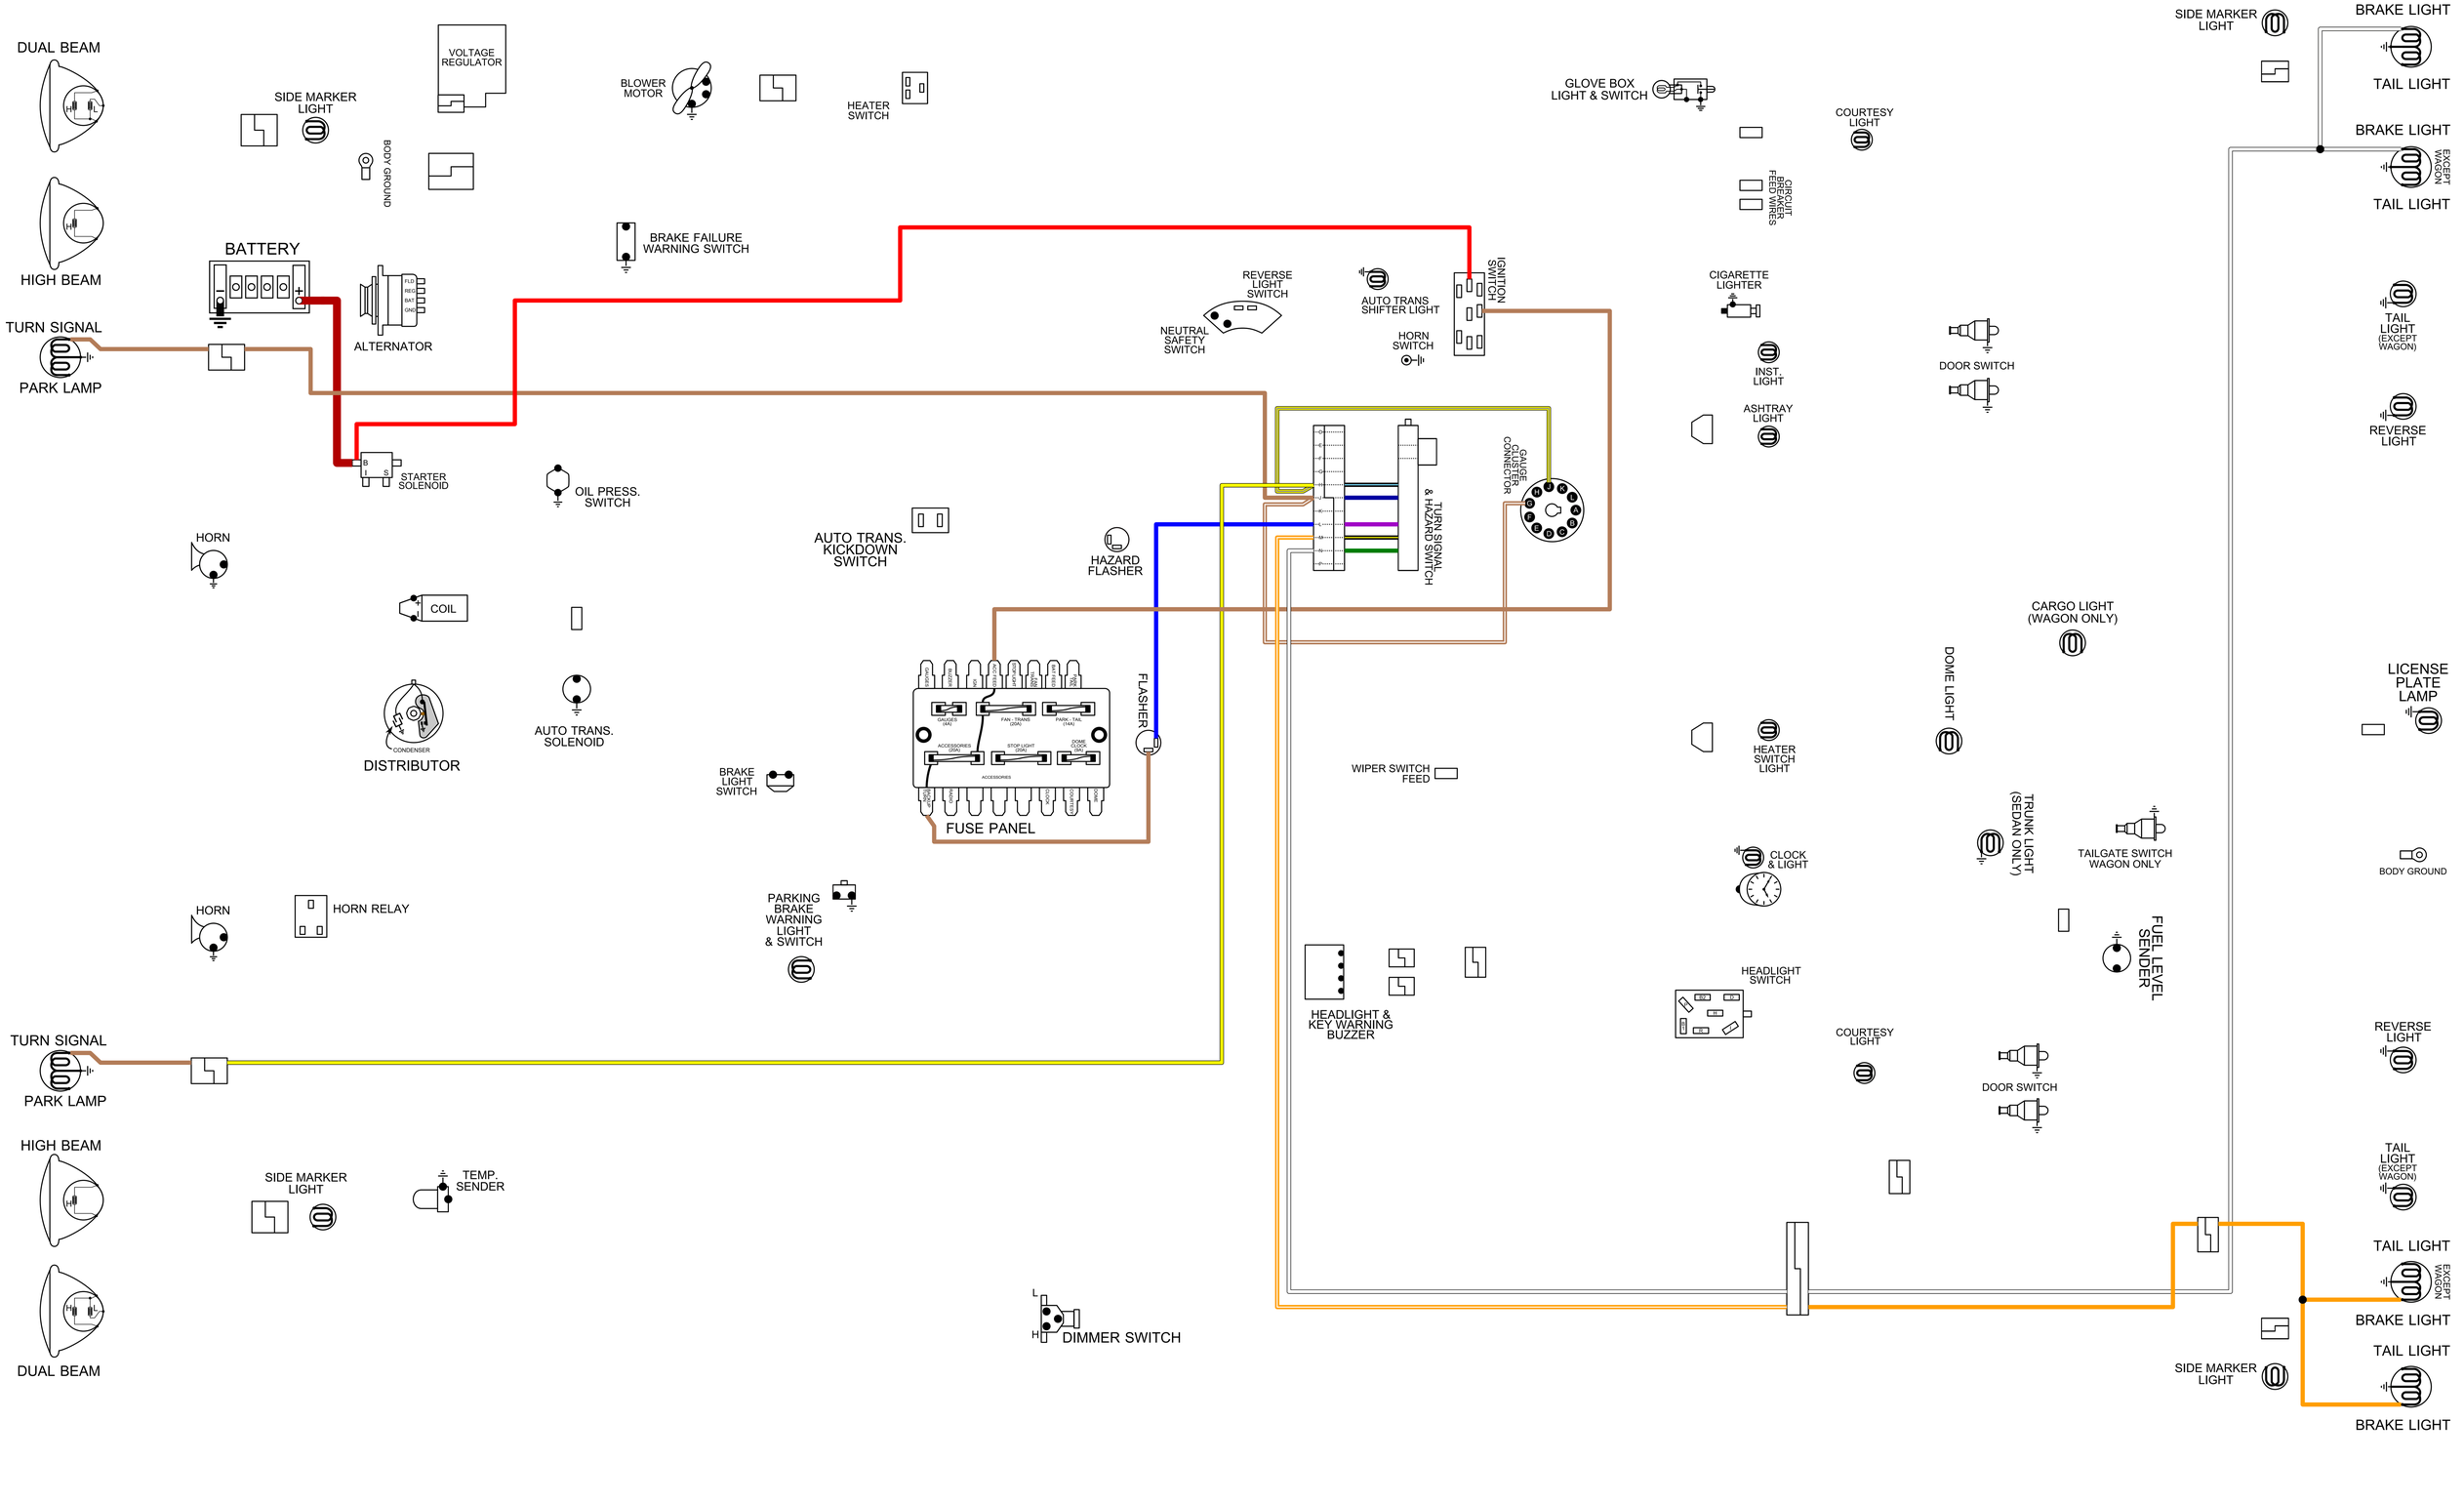

CINCO


1970 AMC AMBASSADOR
HEATER

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
VOLTAGE REGULATOR
BODY GROUND
BATTERY
ALTERNATOR
STARTER SOLENOID
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
OIL PRESS. SWITCH
HORN
COIL
CONDENSER
DISTRIBUTOR
AUTO TRANS. SOLENOID
AUTO TRANS. KICKDOWN SWITCH
BRAKE LIGHT SWITCH
HAZARD FLASHER
FUSE PANEL
FLASHER
WIPER SWITCH FEED
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
HORN SWITCH
IGNITION SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
SIDE MARKER LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT
TAIL LIGHT (EXCEPT WAGON)
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
CARGO LIGHT (WAGON ONLY)
DOME LIGHT
HEATER SWITCH LIGHT
CLOCK & LIGHT
HEADLIGHT SWITCH
HEADLIGHT & KEY WARNING BUZZER
PARKING BRAKE WARNING LIGHT & SWITCH
HORN
HORN RELAY
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
TEMP. SENDER
DIMMER SWITCH
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
FUEL LEVEL SENDER
BODY GROUND
LICENSE PLATE LAMP
REVERSE LIGHT
TAIL LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT
SIDE MARKER LIGHT
CINCO

1970 AMC AMBASSADOR
HORN


DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
BODY GROUND
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
STARTER SOLENOID
OIL PRESS. SWITCH
HORN
COIL
CONDENSER
DISTRIBUTOR
AUTO TRANS. SOLENOID
FUSIBLE LINK
HORN RELAY
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
IGNITION SWITCH
HORN SWITCH
TURN SIGNAL & HAZARD SWITCH
GAUGE CLUSTER CONNECTOR
GAUGES (4A)
FAN - TRANS (20A)
PARK - TAIL (14A)
ACCESSORIES (20A)
STOP LIGHT (20A)
CIGR LIGHTER (30A)
ACCESSORIES
FLASHER
BRAKE LIGHT SWITCH
FUSE PANEL
WIPER SWITCH FEED
PARKING BRAKE WARNING LIGHT & SWITCH
DIMMER SWITCH
HEADLIGHT & KEY WARNING BUZZER
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
SIDE MARKER LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT
EXCEPT WAGON
TAIL LIGHT
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
CARGO LIGHT (WAGON ONLY)
DOME LIGHT
HEATER SWITCH LIGHT
CLOCK & LIGHT
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
FUEL LEVEL SENDER
HEADLIGHT SWITCH
COURTESY LIGHT
DOOR SWITCH
LICENSE PLATE LAMP
BODY GROUND
REVERSE LIGHT
TAIL LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT
EXCEPT WAGON
TAIL LIGHT
BRAKE LIGHT
SIDE MARKER LIGHT
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
TEMP. SENDER

1970 AMC AMBASSADOR
TRANSMISSION

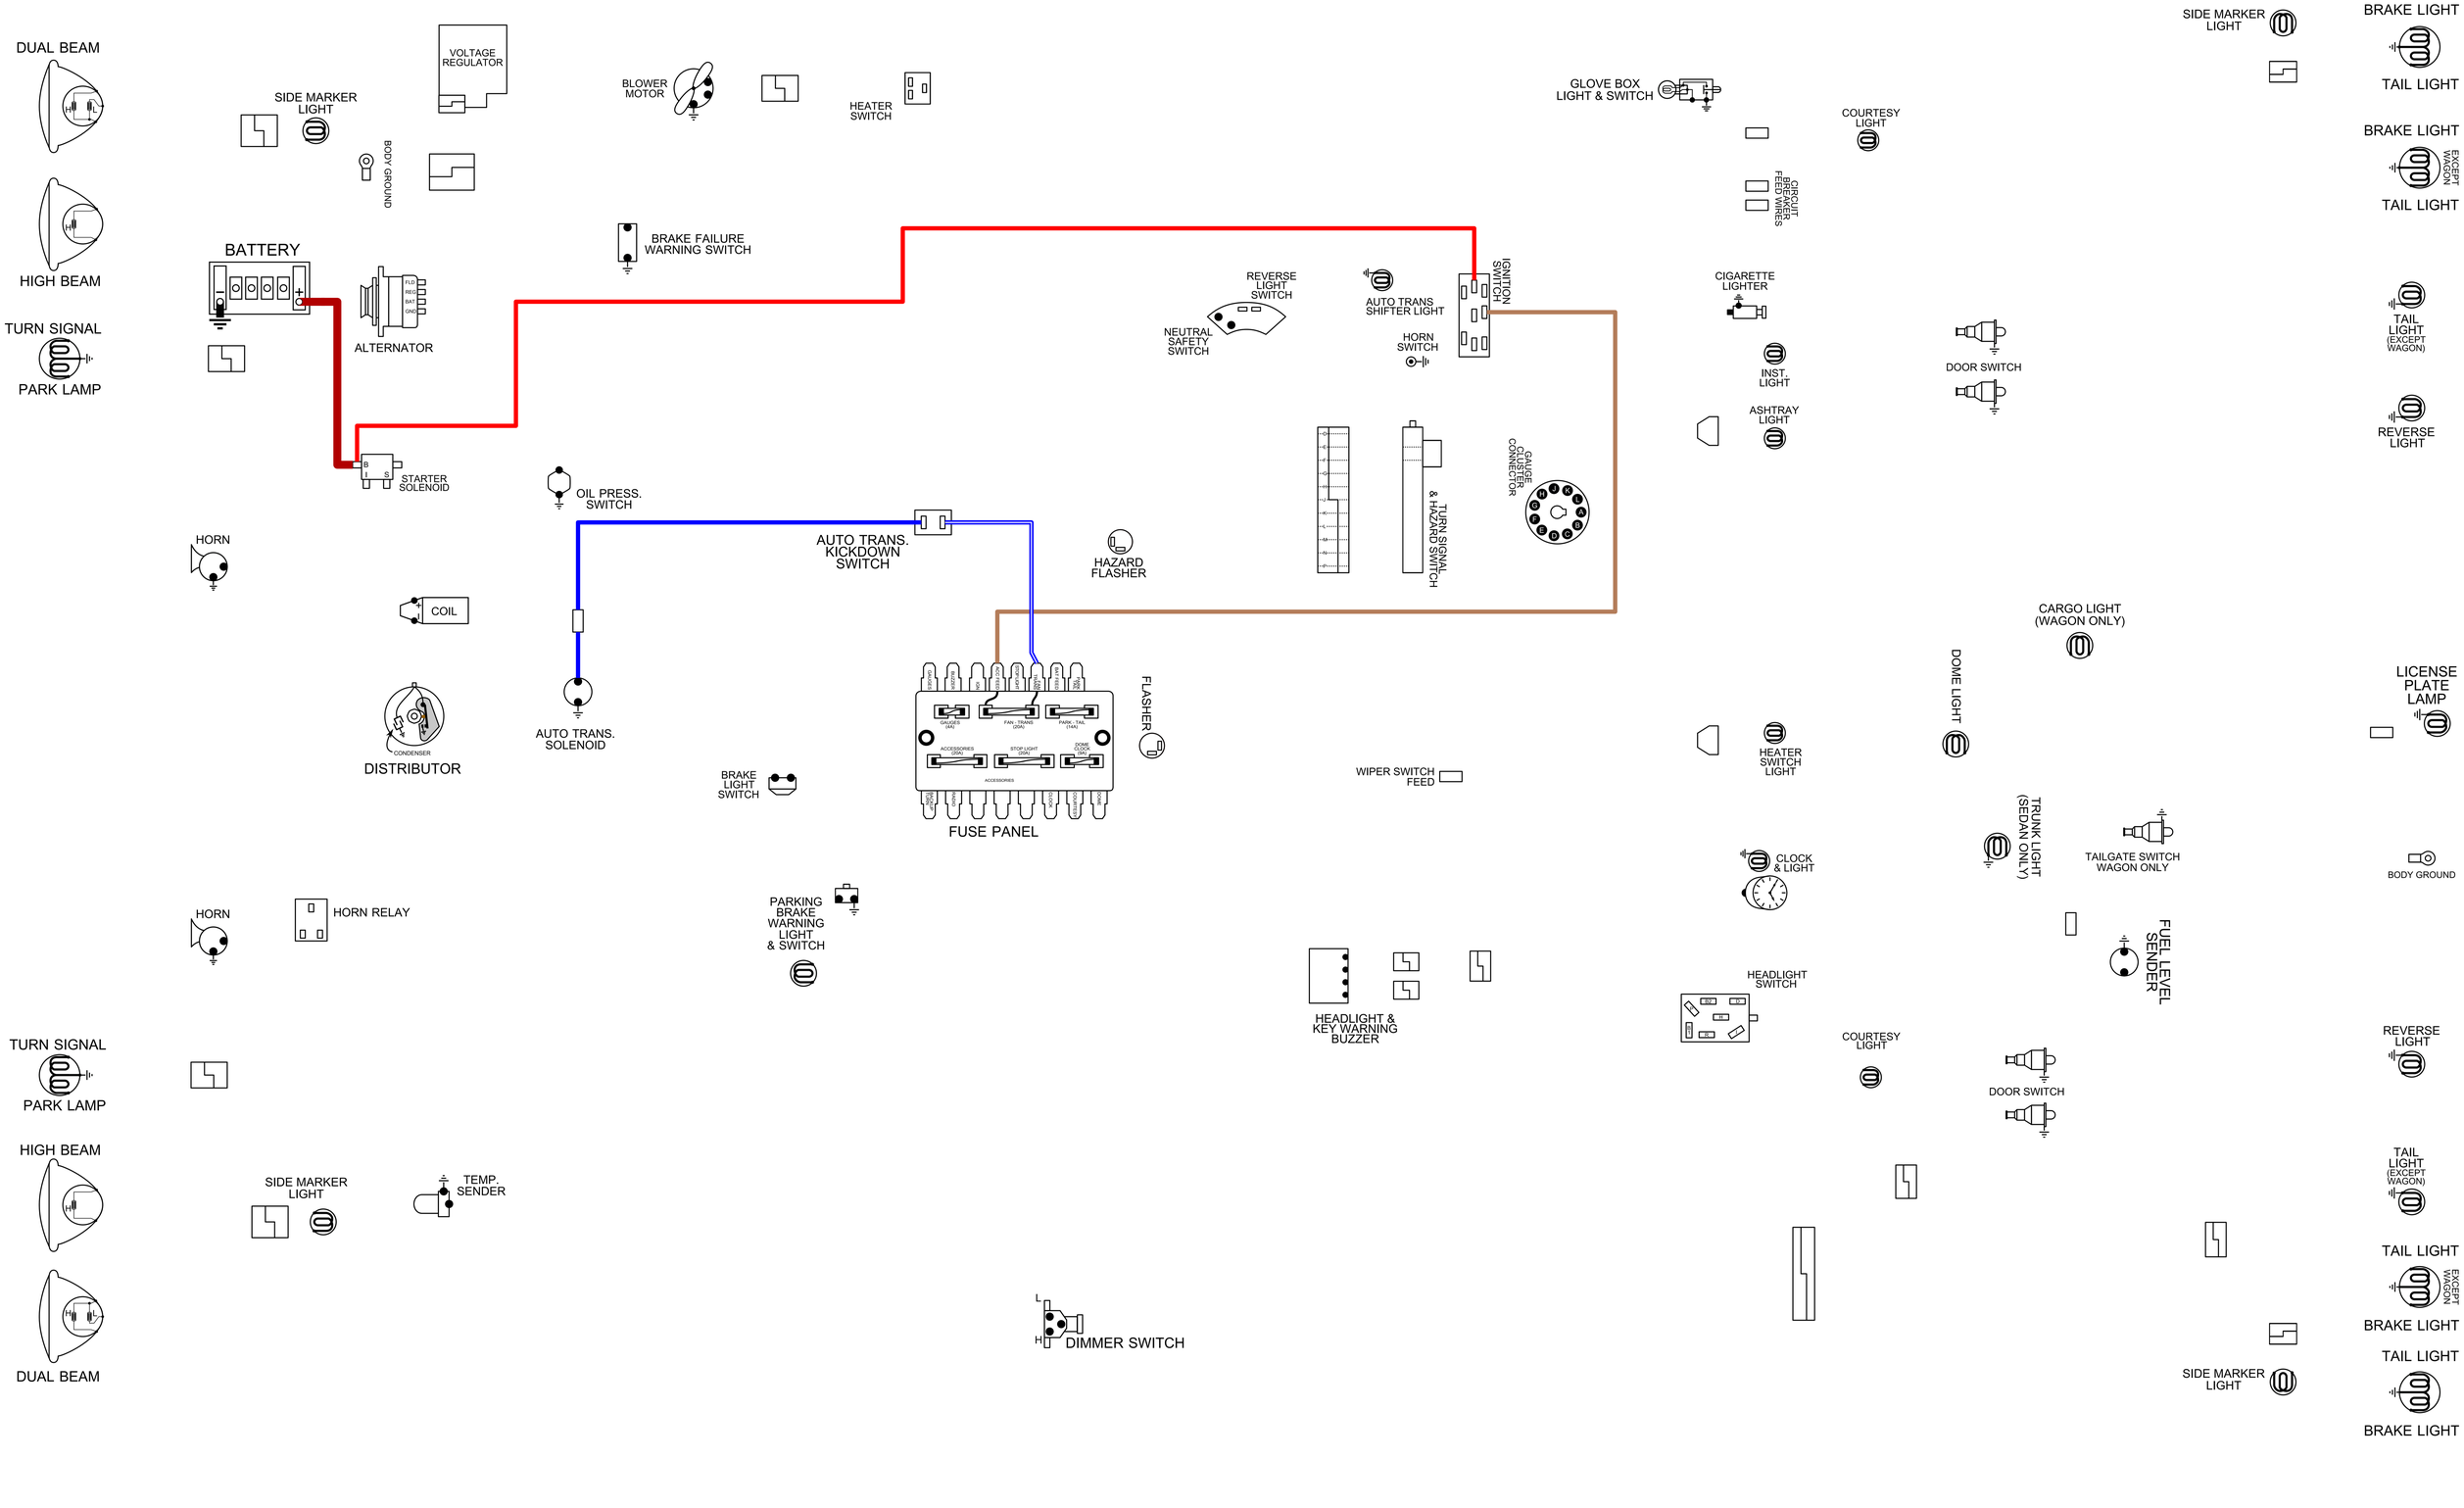

CINCO

1970 AMC AMBASSADOR
GAUGES & WARNING LIGHTS

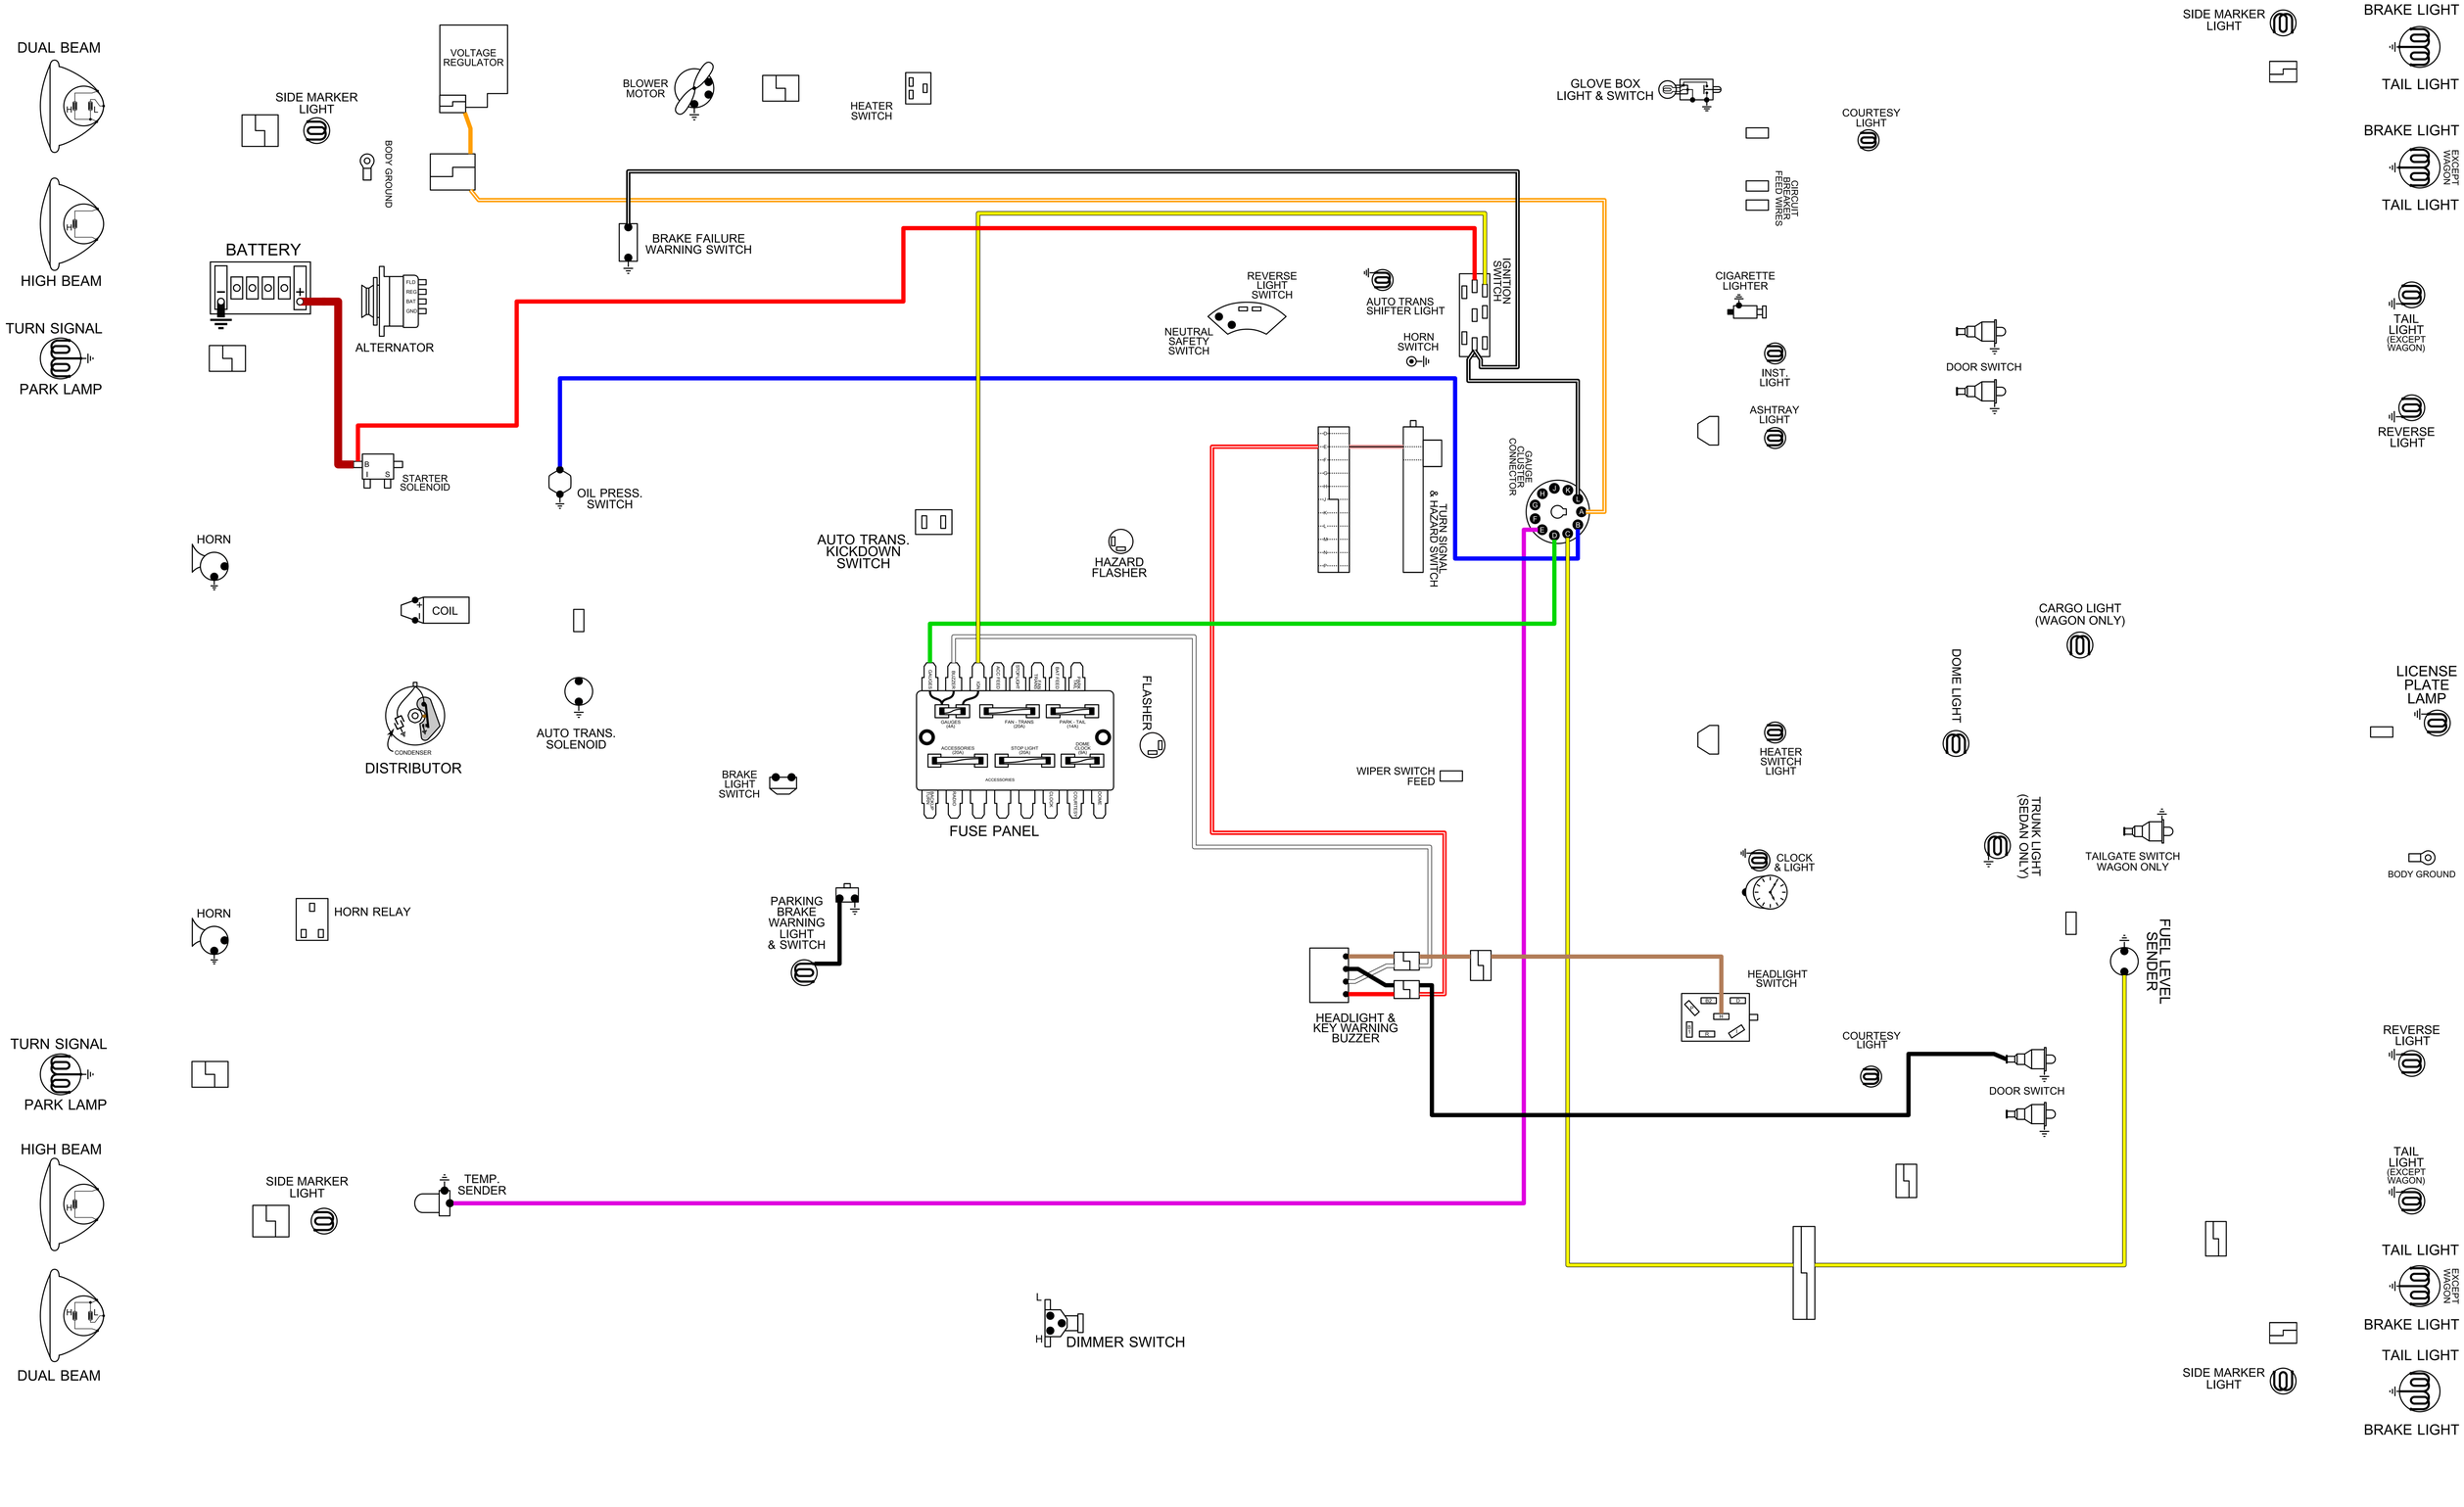


CINCO

1970 AMC AMBASSADOR
REVERSE LIGHTS

DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
SIDE MARKER LIGHT
BODY GROUND
VOLTAGE REGULATOR
BLOWER MOTOR
HEATER SWITCH
BRAKE FAILURE WARNING SWITCH
BATTERY
ALTERNATOR
FLD
REG
BAT
GND
STARTER SOLENOID
OIL PRESS. SWITCH
HORN
COIL
CONDENSER
DISTRIBUTOR
AUTO TRANS. SOLENOID
AUTO TRANS. KICKDOWN SWITCH
HAZARD FLASHER
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
AUTO TRANS SHIFTER LIGHT
HORN SWITCH
IGNITION SWITCH
GAUGE CLUSTER CONNECTOR
TURN SIGNAL & HAZARD SWITCH
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
CIRCUIT BREAKER FEED WIRES
CIGARETTE LIGHTER
INST. LIGHT
ASHTRAY LIGHT
DOOR SWITCH
SIDE MARKER LIGHT
BRAKE LIGHT
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
TAIL LIGHT
TAIL LIGHT (EXCEPT WAGON)
REVERSE LIGHT
CARGO LIGHT (WAGON ONLY)
DOME LIGHT
LICENSE PLATE LAMP
BRAKE LIGHT SWITCH
FUSE PANEL
FLASHER
WIPER SWITCH FEED
HEATER SWITCH LIGHT
TRUNK LIGHT (SEDAN ONLY)
TAILGATE SWITCH WAGON ONLY
BODY GROUND
CLOCK & LIGHT
FUEL LEVEL SENDER
HEADLIGHT SWITCH
HEADLIGHT & KEY WARNING BUZZER
COURTESY LIGHT
DOOR SWITCH
REVERSE LIGHT
TAIL LIGHT (EXCEPT WAGON)
TAIL LIGHT
BRAKE LIGHT (EXCEPT WAGON)
BRAKE LIGHT
SIDE MARKER LIGHT
HORN
HORN RELAY
PARKING BRAKE WARNING LIGHT & SWITCH
TURN SIGNAL
PARK LAMP
HIGH BEAM
DUAL BEAM
SIDE MARKER LIGHT
TEMP. SENDER
DIMMER SWITCH


CINCO

1970 AMC AMBASSADOR
DOME & COURTESY LIGHTS

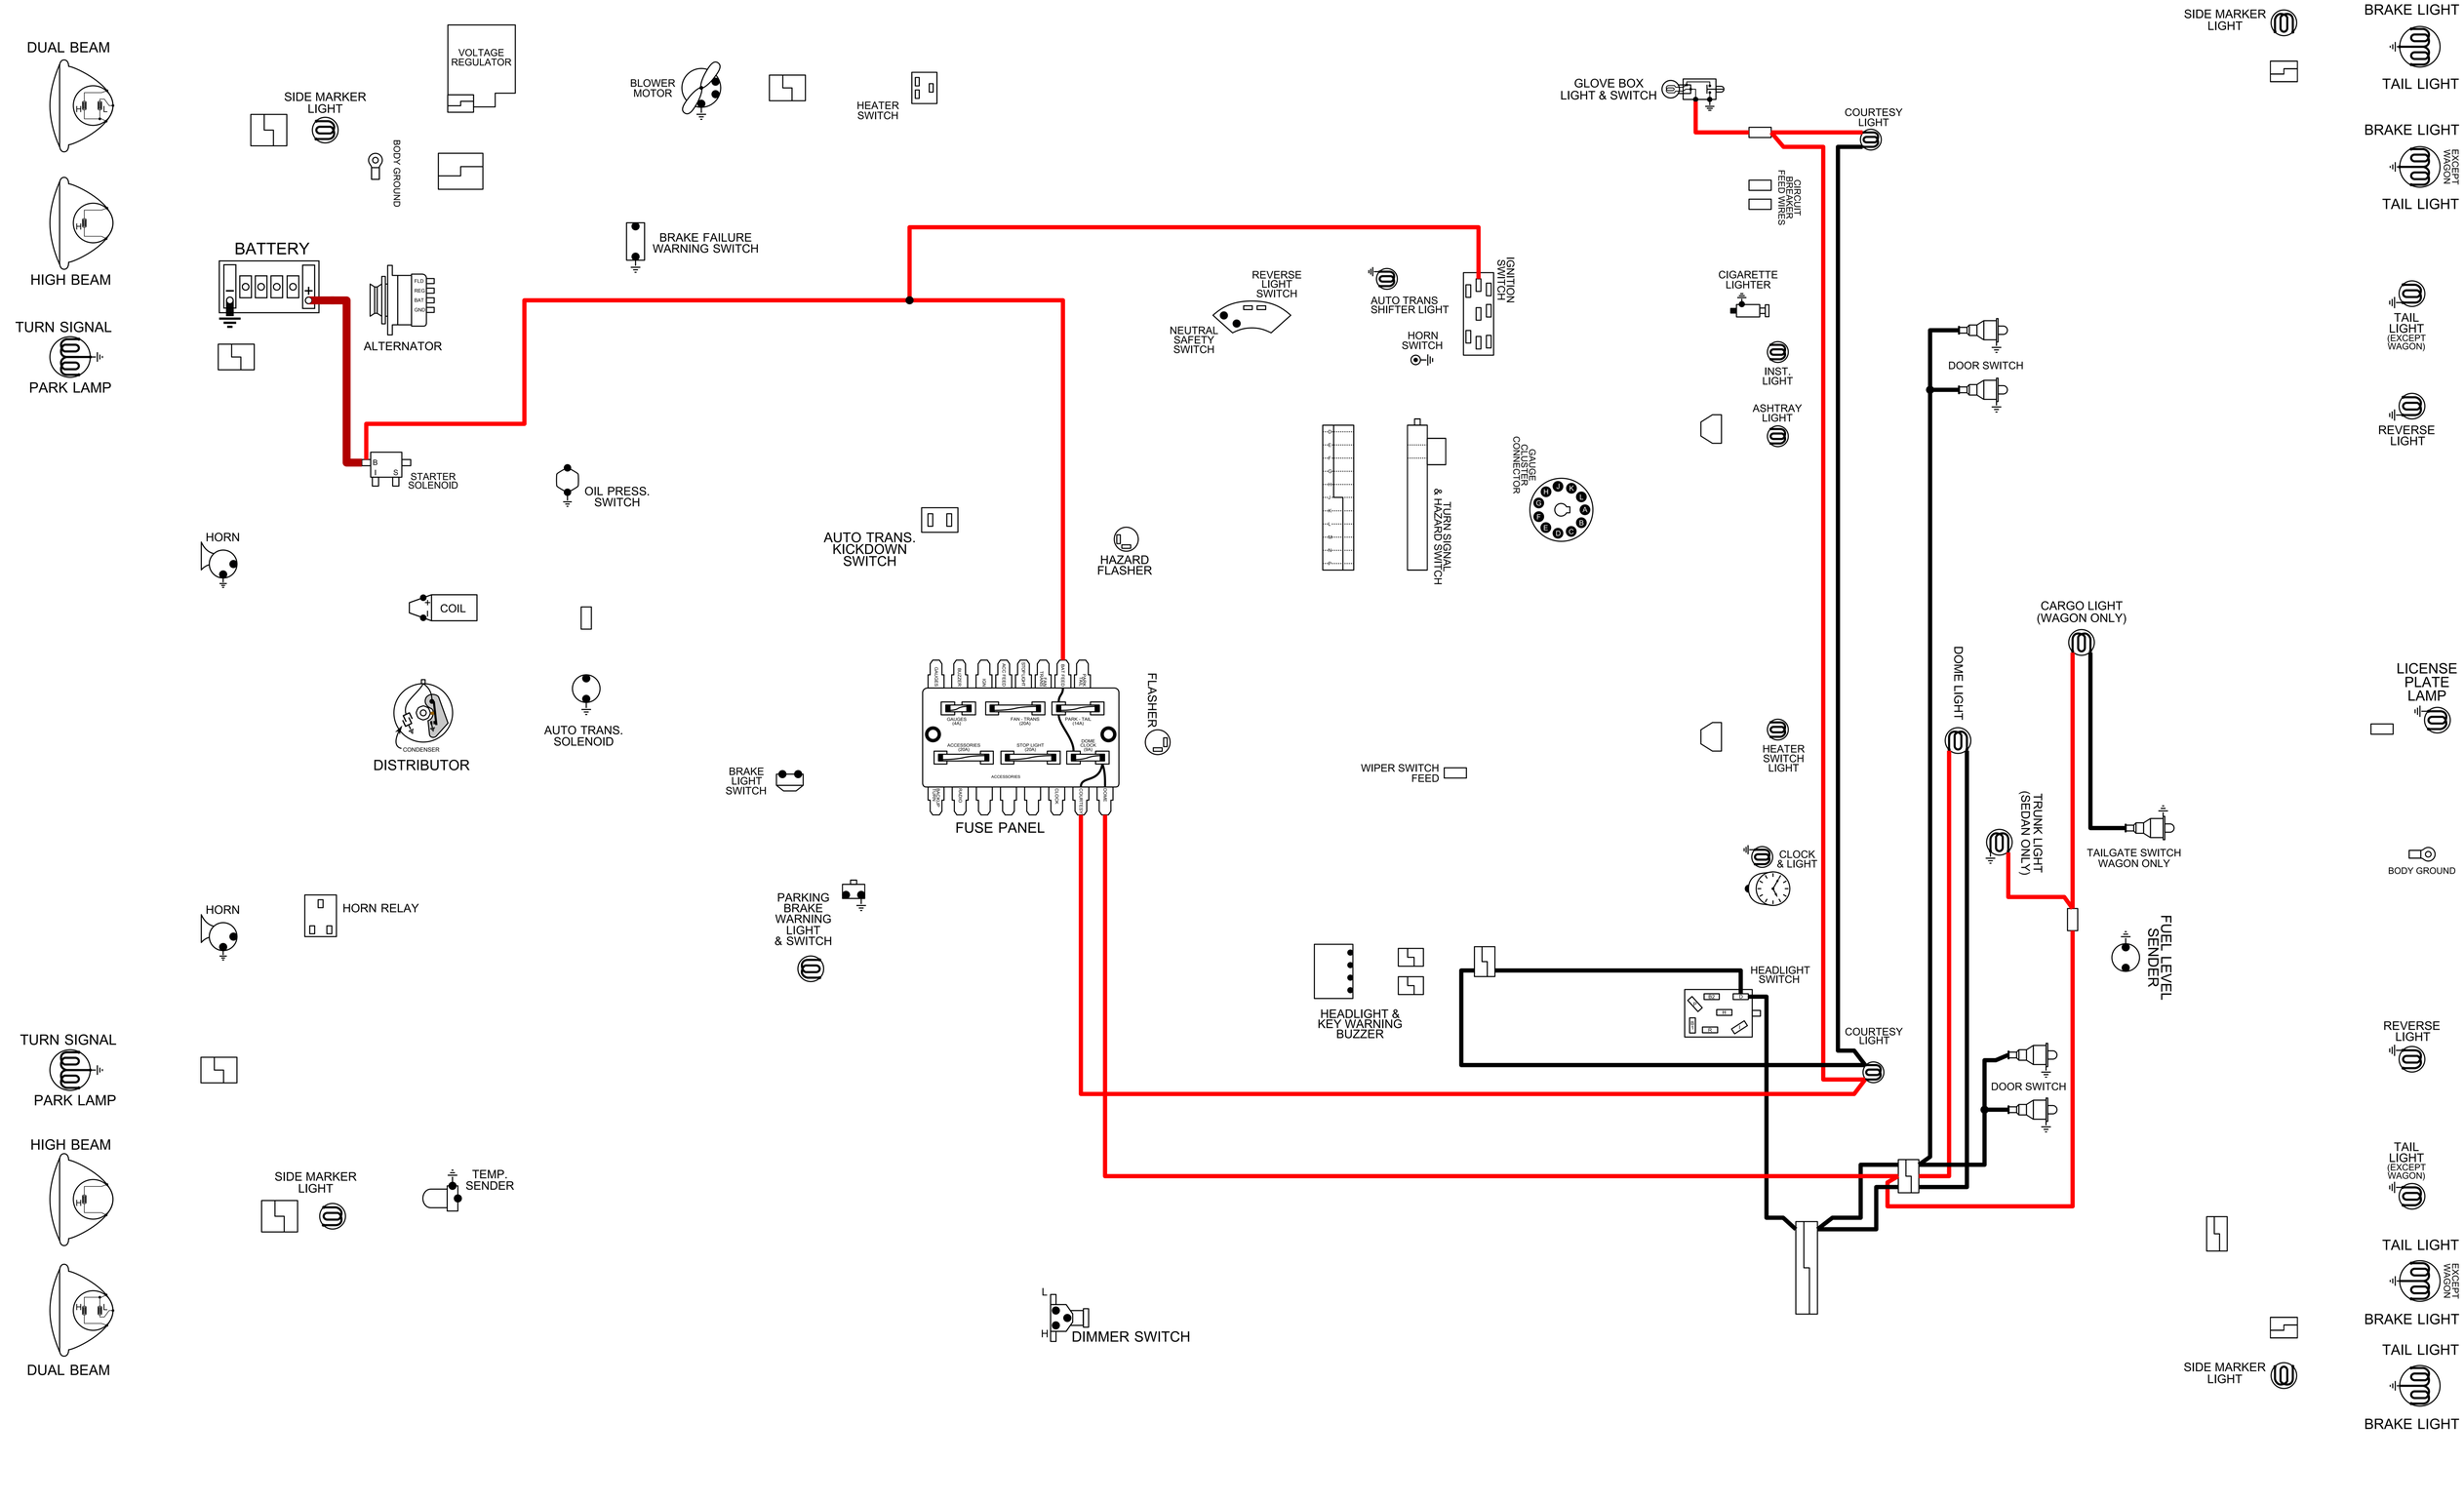

CINCO

1970 AMC AMBASSADOR
DASHBOARD PRINTED CIRCUIT BOARD

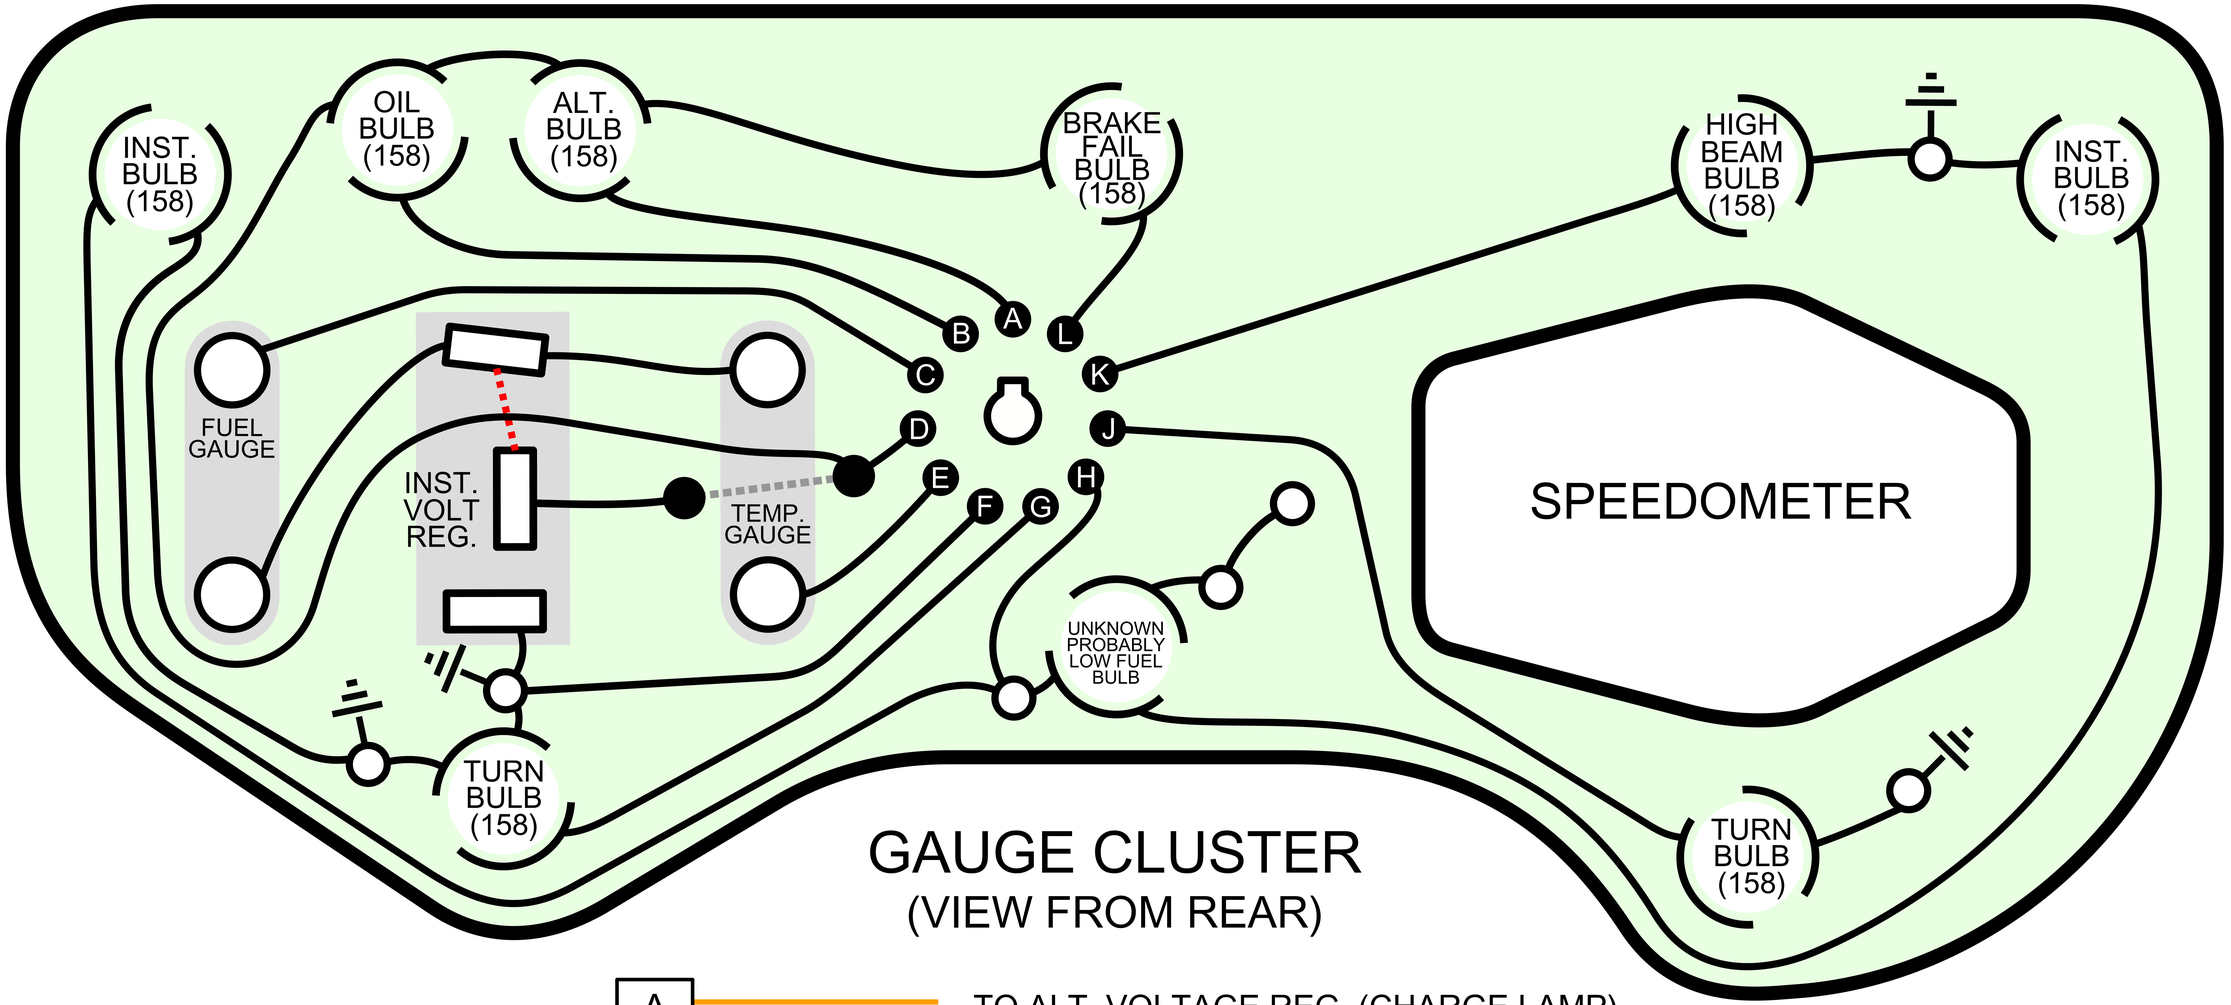

GAUGE CLUSTER
(VIEW FROM REAR)

A	TO ALT. VOLTAGE REG. (CHARGE LAMP)
B	TO OIL PRESS. SWITCH
C	TO FUEL SENDER
D	TO FUSEBOX (POWER FEED)
E	TO TEMP. SENDER
F	UNUSED (GROUND)
G	TO TURN SIG. SWITCH (RIGHT)
H	TO HEADLIGHT SWITCH (INST. LIGHTS)
J	TO TURN SIG. SWITCH (LEFT)
K	TO DIMMER SWITCH (HIGH BEAM IND.)
L	TO BRAKE FAILURE SWITCH

CINCO